PB86-123569

Laboratory and Field Evaluation of the Semi-VOST (Semi-Volatile Organic Sampling Train) Method. Volume 2. Appendices

Radian Corp., Research Triangle Park, NC

Prepared for

Environmental Monitoring Systems Lab.
Research Triangle Park, NC

Nov 85

U.S. Department of Commerce
National Technical Information Service
NTIS

PB86-123569

EPA/600/4-85/075b
November 1985

LABORATORY AND FIELD EVALUATION OF THE SEMI-VOST METHOD VOLUME II: APPENDICES

by

J. Bursey, M. Hartman, J. Homolya,
R. McAllister, J. McGaughey, and D. Wagoner
Radian Corporation
3200 East Chapel Hill Road/Nelson Highway
Post Office Box 13000
Research Triangle Park, North Carolina 27709

EPA Contract No. 68-02-4119
Work Assignment No. 4

Project Officer

John Margeson
Quality Assurance Division
Environmental Monitoring Systems Laboratory
Research Triangle Park, North Carolina 27709

ENVIRONMENTAL MONITORING SYSTEMS LABORATORY
OFFICE OF RESEARCH AND DEVELOPMENT
U. S. ENVIRONMENTAL PROTECTION AGENCY
RESEARCH TRIANGLE PARK, NORTH CAROLINA 27709

REPRODUCED BY
NATIONAL TECHNICAL
INFORMATION SERVICE
U.S. DEPARTMENT OF COMMERCE
SPRINGFIELD, VA. 22161

TECHNICAL REPORT DATA
(Please read Instructions on the reverse before completing)

1. REPORT NO. EPA/600/4-85/075b	2.
3. RECIPIENT'S ACCESSION NO. PB86 123569/AS	
4. TITLE AND SUBTITLE: LABORATORY AND FIELD EVALUATION OF THE SEMI-VOST METHOD: Volume II. Appendices	5. REPORT DATE: November 1985
	6. PERFORMING ORGANIZATION CODE
7. AUTHOR(S): J. Bursey, M. Hartman, J. Homolya, R. McAllister, J. McGauhey, and D. Wagoner	8. PERFORMING ORGANIZATION REPORT NO.
9. PERFORMING ORGANIZATION NAME AND ADDRESS: Radian Corporation, 3200 East Chapel Hill Road/Nelson Highway, Research Triangle Park, NC 27709	10. PROGRAM ELEMENT NO. A109
	11. CONTRACT/GRANT NO. 68-02-4119
12. SPONSORING AGENCY NAME AND ADDRESS: Environmental Monitoring Systems Laboratory, Office of Research and Development, U.S. Environmental Protection Agency, Research Triangle Park, NC 27711	13. TYPE OF REPORT AND PERIOD COVERED
	14. SPONSORING AGENCY CODE EPA/600/08

15. SUPPLEMENTARY NOTES: EPA/600/4-85/075a: Volume I. (report)

16. ABSTRACT

An initial laboratory and field evaluation study has been completed which assessed the performance of the Semi-Volatile Organic Sampling Train Method (Semi-VOST) for measuring concentrations of principal organic hazardous constituents (POHCs) with boiling points greater than 100°C that are emitted from hazardous waste incinerators. A draft formulation of the methodology was tested through an experimental laboratory program to evaluate method performance characteristics. The program consisted of: (1) determination of minimum compound detection limits; (2) simulation of a flue gas stream to determine the impacts of water vapor, SO_2, NO_x, and HCl on sampling; and (3) determination of precision and bias for the sample preparation and analytical elements of the method. Results of the simulation study are reported for 12 test compounds (POHCs) representing a range of physical and chemical properties which could affect sample train collection and recovery performance. Three of the test compounds were selected for further investigation to evaluate method precision and bias under field conditions through the use of four simultaneously-operating Semi-VOST trains. Project results are presetned in Volume I along with recommendations on elements of the method requiring further research. Volume II includes appendices giving detailed descriptions of the method formulation, laboratory, and field studies along with quality assurance data.

17. KEY WORDS AND DOCUMENT ANALYSIS

a. DESCRIPTORS	b. IDENTIFIERS/OPEN ENDED TERMS	c. COSATI Field/Group
Air Pollution Sources Chemical Analysis - Air Pollution Sampling - Gas Chromatography - Mass Spectroscopy	Hydrocarbon Measurement Incinerator Emissions Semi-Volatile Organic Emissions	04A 07A 14B

18. DISTRIBUTION STATEMENT: RELEASE TO PUBLIC	19. SECURITY CLASS (This Report): UNCLASSIFIED	21. NO. OF PAGES: 2
	20. SECURITY CLASS (This page): UNCLASSIFIED	22. PRICE

EPA Form 2220-1 (Rev. 4-77) PREVIOUS EDITION IS OBSOLETE

DISCLAIMER

Although the research described in this article has been funded wholly or in part by the United States Environmental Protection Agency through EPA Contract No. 68-02-4119 to Radian Corporation, it has not been subjected to Agency review and, therefore, does not necessarily reflect the views of the Agency and no official endorsement should be inferred.

ABSTRACT

An initial laboratory and field evaluation study has been completed which assessed the performance of the Semi-Volatile Organic Sampling Train Method (Semi-VOST) for measuring concentrations of principal organic hazardous constituents (POHCs) with boiling points greater than 100°C that are emitted from hazardous waste incinerators. A draft formulation of the methodology was tested through an experimental laboratory program to evaluate method performance characteristics. The program consisted of: (1) determination of minimum compound detection limits; (2) simulation of a flue gas stream to determine the impacts of water vapor, SO_2, NO_x, and HCl on sampling; and (3) determination of precision and bias for the sample preparation and analytical elements of the method. Results of the simulation study are reported for 12 test compounds (POHCs) representing a range of physical and chemical properties which could affect sample train collection and recovery performance. Three of the test compounds (toluene, chlorobenzene, and 1,1,2,2-tetrachloroethane) were selected for further investigation to evaluate method precision and bias under field conditions through the use of four simultaneously-operating Semi-VOST trains. Cylinder gas standards of each compound were blended and dynamically spiked into paired sample trains for determining method bias. Estimates of bias are presented for toluene and 1,1,2,2-tetrachloroethane. Method precision for chlorobenzene is calculated from unspiked sample train results which also included distributive volume experiments to determine sample train breakthrough of POHCs. Project results are presented in Volume I along with recommendations on elements of the method requiring further research. Volume II includes appendices giving detailed descriptions of the method formulation, laboratory, and field studies along with quality assurance data.

CONTENTS

VOLUME I

Disclaimer ii
Abstract iii
Figures v
Tables v

1. Introduction 1
2. Conclusions and Findings 3
3. Recommendations 5
4. Method Formulation 7
5. Laboratory Evaluations 10
   - Selection of Test Compounds 10
   - Flue Gas Generator Experiments 11
   - Sample Preparation Precision and Bias Experiments . 20
6. Field Evaluation 25
   - Field Test Site Description 25
   - Experimental Design and Sample Collection 26
   - Laboratory Analysis 28
   - Analytical Results and Discussion 31

References 44

VOLUME II

Appendices

A. Sampling and Analysis Procedures for the Determination of Semi-Volatile Compounds From Combustion Sources . . . A-1
   - A-1 Cleaning of Glassware A-63
   - A-2 Preparation of XAD-2® Sorbent Resin A-66
   - A-3 MS - Analytical Ions A-73

B. Generator Experiments and Data B-1
C. Semi-VOST Method Interferences/Artifact Formation . . . C-1
D. Analytical Precision and Bias D-1
E. Field Test Program E-1
F. Field Test Analytical Data F-1
G. Quality Assurance/Quality Control G-1

FIGURES

Number		Page
1	Dynamic spiking apparatus	27
2	Distributive sample volumes versus chlorobenzene concentration	43

TABLES

Number		Page
1	Minimum Detection Limit (MDL) for GC/MS Analysis of Test Compounds in Methanol	12
2	Sample Generation Variables	14
3	Operating Levels for a 1/2 Replicate of a 2^5 Factorial Experiment	14
4	Comparison of Mean Sample and Surrogate Recoveries for Baseline Runs and the 16 Operating Conditions	15
5	Compound Recoveries Under Generator Conditions "cd" and "ab"	17
6	Overall Recovery and Fractional Distribution of 1,4-Dioxane, Urethane, and Phenol for NO_x Level I and Level II Generator Conditions	19
7	Laboratory Sample Preparation Precision and Bias Determination	23
8	Sample Collection Matrix and Test Schedule	29
9	Samples Selected for Analysis	30
10	Surrogate Spiking Compounds	32
11	Overall Surrogate Recoveries From All Media	33
12	Analyses of Dynamic Spiking Runs	35
13	Chlorobenzene Precision Results, Field Study	38
14	Apportionment of Method Precision for Chlorobenzene	40
15	Analyses of Distributive Volume Runs	41

APPENDIX A

SAMPLING AND ANALYSIS PROCEDURES FOR THE DETERMINATION OF SEMI-VOLATILE COMPOUNDS FROM COMBUSTION SOURCES

INTRODUCTION

Appendix A is the draft of the Semi-VOST sampling and analysis method. With the exception of typographical errors and editorial comments, all changes and additions to the original draft method are listed below with the corresponding section number in which the changes or additions occur.

Section 1.3 - Previously listed as "to be determined," now included.

Section 1.4 - Previously listed as "to be determined," now included.

Section 1.5 - Previously listed as "to be determined," now included.

Section 2.1.5 - Teflon® or equivalent material is recommended as gasket material.

Sections 2.1.7 & 2.1.8 - Clarification of sampling train description components.

Figure 2-3 - Redrawn to show position of thermocouple.

Section 2.2.4 - Clarification of impinger solution description.

Section 3.1 - Changed solvent screening level (acceptable level) from 25 to 5 µg/mL.

Section 4.1.1 - Now includes statement regarding preweighing of filters if particulate is to be measured.

Section 4.1.2 - Now includes statement regarding utilization of retention volumes when selecting the appropriate sample volume.

Section 4.1.3 - Section now discusses use of caustic in the third impinger.

Section 4.1.4.1 - Clarification of leak check procedure.

Section 4.2.3.2 - Clarification of probe rinsing procedure.

Figures 4-2, 4-3, 4-4 - Redrawn with numbering system to indicate the order of sample recovery and to better coordinate the sample description with Table 4-1.

Table 4-1 - Now includes sample numbering system to better coordinate with Figures 4-2, 4-3, and 4-4 and also references to appropriate subsequent sections regarding sample preparations.

Section 4.3.4 - Changed to include weighing of filters prior to extraction.

Section 4.3.5 - Changed to include new preparation procedures for solvent rinses.

Section 4.4.2.2 - Internal (quantitation) standard changed to phenanthrene-d_{10}.

Table 7-1 - Suggested surrogate spiking compounds updated.

Section 7.3.1-2 - Daily calibration changed to a single daily calibration run.

Table 7-2 - Suggested surrogate spiking compounds up-dated.

Table 7-3 - Suggested surrogate spiking compounds up-dated.

Appendix A-2 - Preparation of XAD-2® sorbent resins, last paragraph of Section 2.1 is deleted.

The Semi-VOST sampling and analytical method presented on the following pages incorporates comments and suggestions received from the following companies familiar with the method:

- Entropy Environmentalists, Inc., Raleigh, North Carolina;
- Midwest Research Institute, Kansas City, Missouri;
- PEI Associates, Inc., Cincinnati, Ohio;
- Battelle-Columbus, Columbus, Ohio; and
- GCA, Inc., Boston, Massachusetts.

SAMPLING AND ANALYSIS

1. Principle and Applicability

1.1 Principle. Gaseous and particulate pollutants are withdrawn from an emission source at an isokinetic sampling rate and are collected in a multicomponent sampling train. Principal components of the train include a high efficiency glass or quartz fiber filter and a packed bed of porous polymeric adsorbent resin. The filter is used to collect organic ladden particulate materials, and the porous, polymeric resin to adsorb semi-volatile organic species. Semi-volatile species are defined as compounds with boiling points greater than 100°C.

Comprehensive chemical analyses of the collected sample are conducted to determine the concentration and identity of the organic materials.

1.2 Applicability. This method is applicable to the determination of the Destruction and Removal Efficiency (DRE) of semi-volatile Principal Organic Hazardous Compounds (POHC's) from incineration systems.[1] This method also may be used to determine particulate emission rates from stationary sources per U.S. EPA Method 5.[2]

1.3 Method Detection Limit. The overall method detection limits (lower and upper) must be determined on a compound by compound basis as different compounds may exhibit different collection, retention, and extraction efficiencies as well as instrumental minimum detection limit (MDL). Also, the method detection limit must be quoted relative to a given sample volume. The upper limits for the method must be determined relative to compound retention volumes (break-through).

1.4 Method Precision and Bias. The overall method precision and bias must be determined on a compound by compound basis at a given concentration level. The method precision value would include a combined variability due to sampling, sample preparation, and instrumental analysis. The method bias would be dependent upon the collect, retention, and extraction efficiency of the train components. From evaluation studies to date using a dynamic spiking system, method biases of -13 and -16 percent have been determined for toluene and 1,1,2,2-tetrachloroethane, respectively. A method precision of 19.9 percent was calculated from a

field test data set representing seven degrees of freedom which resulted from a series of paired, unspiked Semi-VOST trains sampling the emissions from a hazardous waste incinerator.

1.5 Interferences. Oxides of nitrogen (NO_x) are possible interferents with the determination of certain water soluble compounds such as dioxane, phenol, and urethane. These compounds may react with NO_x in the presence of moisture and, therefore, reduce their concentration. Other areas of concern which could result in a positive or negative bias are (1) compound stability in methylene chloride, (2) the formation of water soluble organic salts on the resin in the presence of moisture, and (3) the solvent extraction efficiency of water soluble compounds from aqueous media. Use of two or more ions per compound for qualitative and quantitative analysis can overcome interference at one mass. These topics should be addressed on a compound by compound basis before using this method.

2. Apparatus

2.1 Sampling Train. A schematic of the sampling train used in this method is shown in Figure 2-1. This sampling train configuration is adapted from EPA Method 5[2] procedures and most of the equipment required is identical to that used in EPA Method 5 determinations. The additional components required are a condenser coil and a sorbent module, which is used to collect semi-volatile organic materials that pass through the glass or quartz fiber filter in the gas phase.

Construction details for the basic train components are given as part of EPA Method 5 in the report by Robert M. Martin;[5] commercial models of this equipment are also available. Specifications for the sorbent module are provided in the following subsections. In addition, the following subsections list changes to the basic system described by Martin, and identify allowable train modifications.

Basic operating and maintenance procedures for the sampling train are described by Jerome J. Rom.[6] As correct usage is important in obtaining valid results, all users should refer to this reference and adopt the operating and maintenance procedures outlined therein, unless otherwise specified. The sampling train consists of the components described in the following paragraphs.

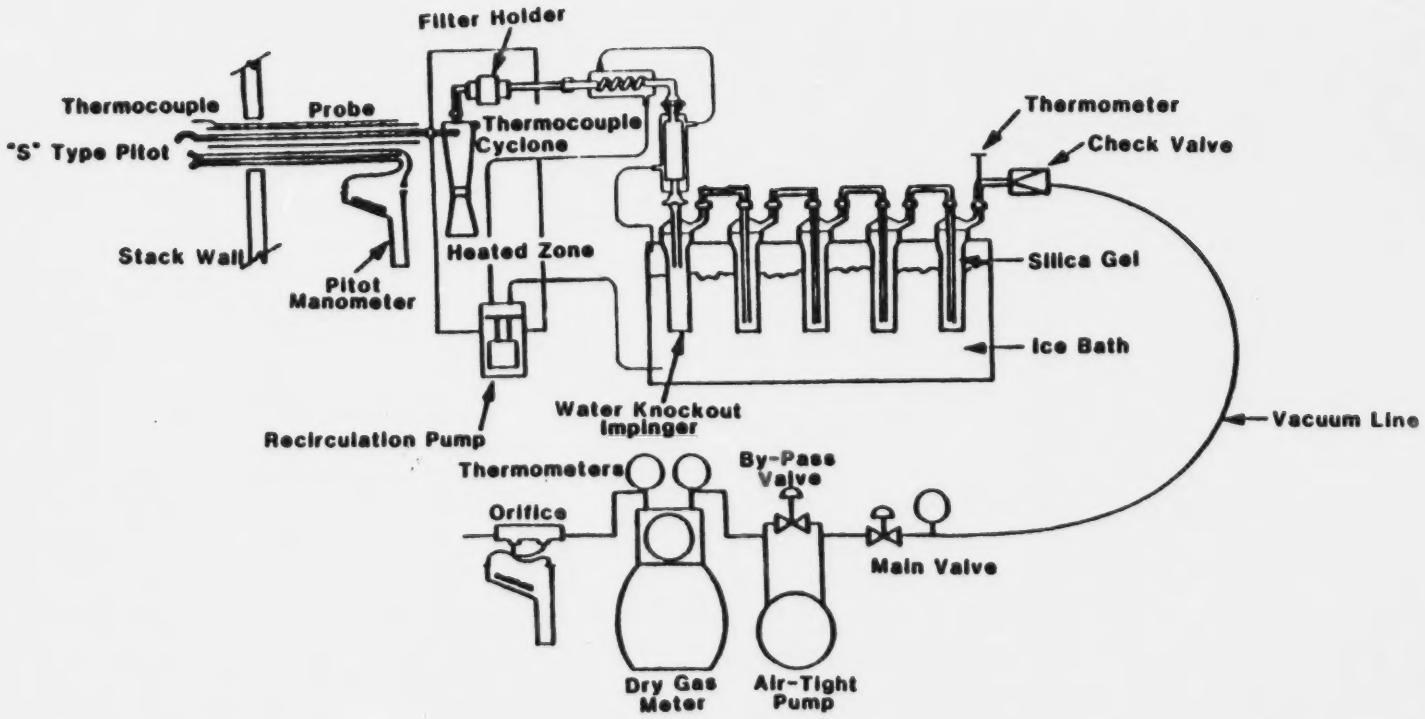

Figure 2-1. Semi-VOST train schematic diagram.

2.1.1 Probe Nozzle. Stainless steel (316) or glass with sharp, tapered leading edge. The angle of taper shall be 30° and the taper shall be on the outside to preserve a constant inside diameter (ID). The probe nozzle shall be the buttonhook or elbow design, unless another configuration is necessary for a special application. If made of stainless steel, the nozzle shall be constructed from seamless tubing; other materials of construction may be considered for particular applications.

A range of nozzle sizes suitable for isokinetic sampling should be available, e.g., 0.32 to 1.27 cm (1/8 to 1/2 in.) inside diameter. If higher volume sampling trains are used, nozzles with ID's increasing in increments of 0.16 cm (1/16 in.) can be procured. Each nozzle shall be calibrated according to the procedures outlined in Section 5.

2.1.2 Probe Liner. Borosilicate glass or quartz tubing with a heating system capable of maintaining a gas temperature of 120 ± 14°C (248 ± 25°F), or such other temperature appropriate for a particular application. Since the actual temperature at the outlet of the probe is not usually monitored during sampling, probes constructed according to Martin[5] and utilizing the calibration curves of Rom[6] (or calibrated according to the procedure outlined in Rom) are considered acceptable.

Either borosilicate glass or quartz probe liners may be used for stack temperatures up to about 480°C (900°F). Quartz liners shall be used for temperatures between 480 and 900°C (900 and 1,650°F). Water-cooling of the stainless steel sheath will be necessary, however, at temperatures approaching and exceeding 500°C.

2.1.3 Pitot Tube. Type S, as described in Section 2.1 of EPA Method 2[2] or other appropriate[7] devices. The pitot tube shall be attached to the probe to allow constant monitoring of the stack gas velocity. The impact (high pressure) opening plane of the pitot tube shall be even with or above the nozzle entry plane (see EPA Method 2, Figure 2-6b) during sampling. The Type S pitot tube assembly shall have a known coefficient, determined as outlined in Section 4 of EPA Method 2.

2.1.4 Differential Pressure Gauge. Inclined manometer or equivalent device as described in Section 2.2 of EPA Method 2. One manometer shall be used for velocity head (ΔP) readings, and the other for orifice differential pressure (ΔH) readings.

2.1.5 Filter Holder. Borosilicate glass, with a glass frit filter support and a sealing gasket. The sealing gasket should be made of material(s) that will not introduce organic material into the gas stream at the temperature at which the filter holder will be maintained. The gasket shall be constructed of Teflon® or materials of equal or better characteristics. The holder design shall provide a positive seal against leakage at any point along the filter circumference. The filter holder shall be attached immediately to the outlet of the cyclone or cyclone bypass.

2.1.6 Filter Heating System. Any heating system capable of maintaining a temperature of 120 ± 14°C (248 ± 25°F) in the vicinity of the filter holder during sampling; other temperatures may be appropriate for particular applications.

2.1.7 Organic Sampling Module. This unit consists of three sections including a gas conditioning section, a sorbent trap and a condensate knockout trap. The gas conditioning system shall be capable of conditioning the gas leaving the back half of the filter holder to a temperature not exceeding 20°C (68°F). The sorbent trap shall be sized to contain approximately 20 grams of porous polymeric resin (Rohm and Haas XAD-2®). The most commonly used coolant is ice water from the impinger ice water bath constantly circulated through the outer jacket using rubber or plastic tubing and a peristaltic pump. The sorbent trap should be outfitted with a glass well or depression, appropriately sized to accommodate a small thermocouple in the trap for monitoring the gas entry temperature. The condensate knockout trap shall be of sufficient size to collect the condensate following gas conditioning. The organic module components shall be oriented to direct the flow of condensate vertically downward from the conditioning section, through the adsorbent medium, and into the condensate knockout trap. The knockout trap is usually similar in appearance to an empty impinger directly underneath the sorbent module; it may be oversized but should have a shortened center stem (at a minimum, one-half the length of the normal impinger stems) to collect a large volume of condensate without bubbling and overflowing into the impinger train. All surfaces of the organic module wetted by the gas sample shall be fabricated of borosilicate glass, Teflon® or other inert materials.

Versions of the complete organic module are not commercially available, but may be assembled from commercially available laboratory glassware and a custom-fabricated sorbent trap. Details of two acceptable designs are shown in Figures 2-2 and 2-3. (The thermocouple well is shown in Figure 2-2).

2.1.8 Impinger Train. The following system shall be used to determine the stack gas moisture content. Following the knockout trap are four 500 mL impingers connected in series with leak-free ground glass joints. The first, third and fourth impingers shall be of the Greenburg-Smith design, modified by replacing the tip with 1.3 cm (1/2 in.) ID glass tube extending to about 1.3 cm. (1/2 in.) from the bottom of the outer cylinder. The second impinger shall be of the Greenburg-Smith design with the standard tip. The first and second impingers shall contain known quantities of water or appropriate trapping solution. The third shall be empty or be charged with a caustic solution should the stack gas contain hydrochloric acid (HCl). The fourth shall contain a known weight of silica gel or equivalent desiccant.

2.1.9 Metering System. The necessary components are a vacuum gauge, a leak-free pump, thermometers capable of measuring temperature to within 3°C (5.4°F), and a dry gas meter capable of measuring volume to within 1 percent, as shown in Figure 2-1. At a minimum, the pump should be capable of 4 cfm free flow and the dry gas meter should have a recording capacity of 0-999.9 cubic feet with a resolution of 0.005 cubic feet. Other metering systems capable of maintaining sampling rates within 10 percent of isokinetic and of determining sample volumes to within 1 percent may be used. The metering system must be used in conjunction with a pitot tube to enable checks of isokinetic sampling rates.

Sampling trains utilizing metering systems designed for higher flow rates than those described by Martin[5] or Rom[6] may be used provided that the specifications of this method are met.

2.1.10 Barometer. Mercury, aneroid, or other barometer capable of measuring atmospheric pressure to within 2.5 mm. Hg (0.1 in. Hg). The barometric reading may be obtained from a nearby national weather service station, in which case the station value (which is the absolute barometric

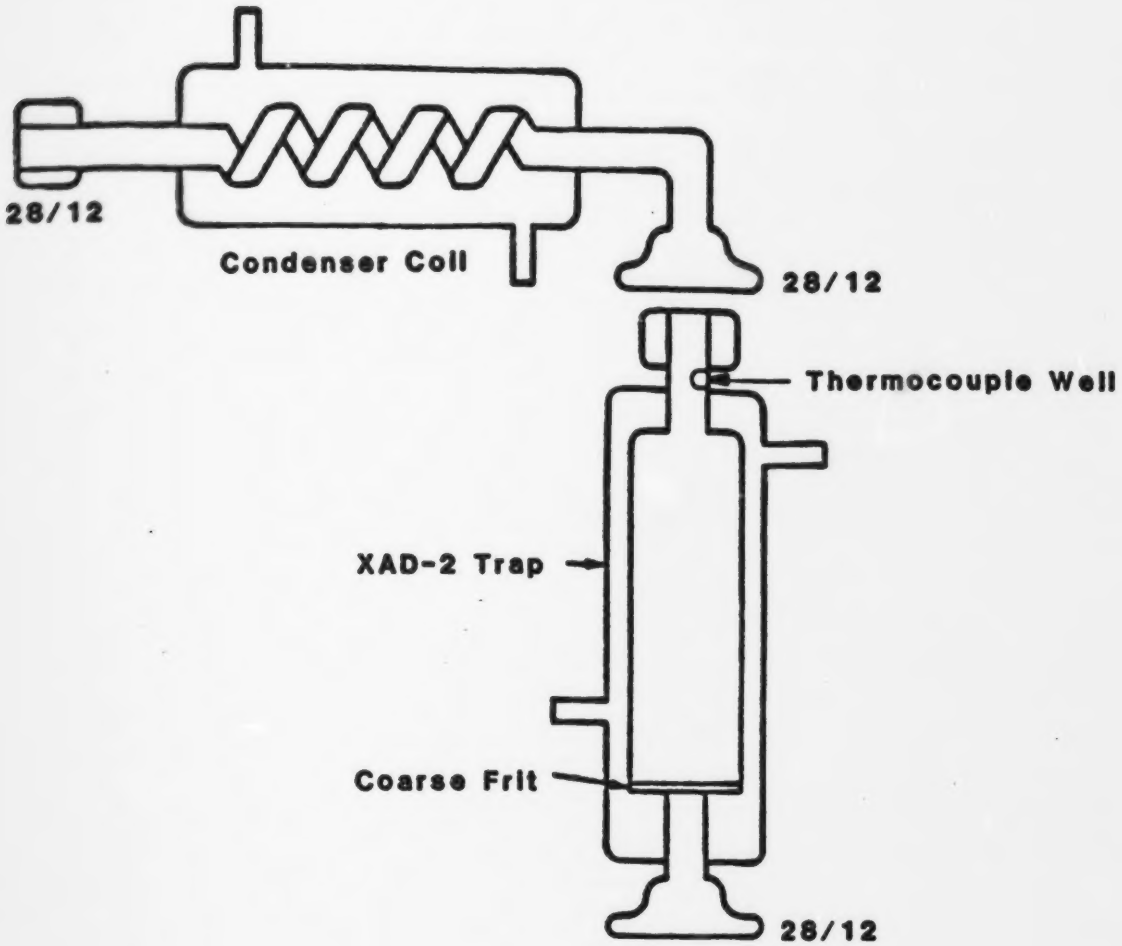

Figure 2-2. Acceptable sorbent module design #1.

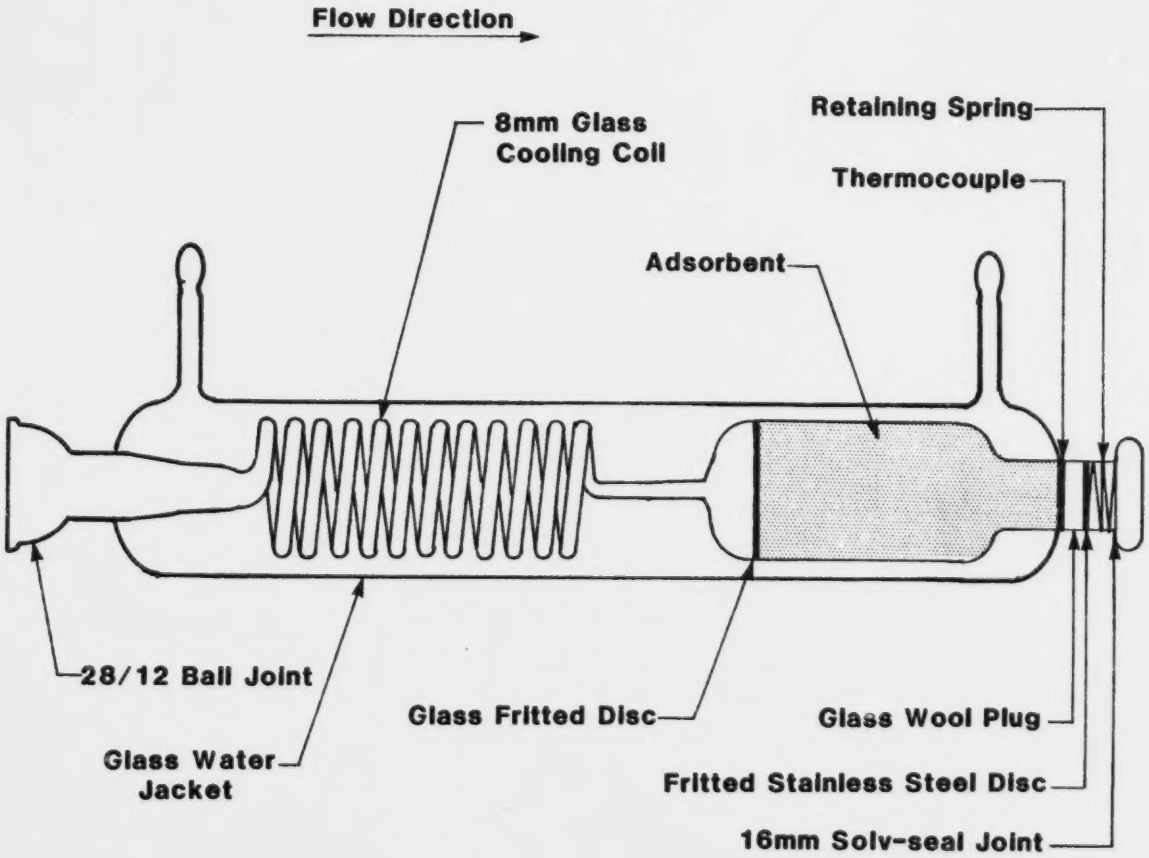

Figure 2-3. Acceptable sorbent module design #2.

pressure) shall be requested and an adjustment for elevation difference between the weather station and sampling point shall be applied at a rate of minus 2.5 mm Hg (0.1 in Hg) per 30 m (100 ft) elevation increase or vice versa for elevation decrease.

2.1.11 Crushed Ice. Quantities ranging from 10-50 lb may be necessary during a sampling run, depending upon ambient air temperatures.

2.1.12 Glass Wool. Used to plug the unfritted end of the sorbent module. The glass wool fiber should be solvent-extracted with methylene chloride in a Soxhlet extractor for 12 hours and air-dried prior to use.

2.1.13 Gas Density Determination Equipment. The fixed gas samples for determining the stack gas density during the sampling run are taken using an integrated gas sampling train. The gas sample is bled through a nonreactive probe and an air-cooled condenser or equivalent which removes excess moisture from the gas stream and cools the hot gas to ambient temperatures. The sampling flowrate is measured with a flow rate meter and controlled by a needle valve. The sample is collected in a leak-free bag and analyzed with an ORSAT appraratus. Detailed specifications may be found in EPA Method 3.[2]

2.1.14 Calibration/Field Preparation Record. For documenting and recording calibrations and preparation procedures (i.e., filter and silica gel tare weights, clean XAD-2®, quality assurance/quality control check results, dry gas meter and thermocouple calibrations, etc.), a permanently-bound laboratory notebook is required, in which duplicate copies of the data may be made as they are being recorded. The duplicate copies should be detachable and stored separately in the test program archives.

2.2 Sample Collection Media

2.2.1 Filters. Glass or quartz fiber filters, without organic binder, exhibiting at least 99.95 percent efficiency (<0.05 percent penetration) for 0.3 um dioctyl phthalate smoke particles. The filter efficiency test shall be conducted in accordance with ASTM standard method D 2986-71.[4] Test data from the supplier's quality control program are sufficient for this purpose. In sources containing SO_2 or SO_3, the filter material must be of type that is unreactive to these acid gases.[3] Reeve Angel® 934 AH or Schleicher and Schwell #3 filters work well under these conditions.

2.2.2 Adsorbent Resin. Porous polymeric resin, XAD-2®, shall be used. The resin must be cleaned prior to use, according to the procedure outlined in Appendix B of this method. Once cleaned, the resin should be stored in an air-tight wide-mouth amber glass container with a Teflon®-lined cap or placed in one of the glass sorbent modules tightly sealed with Teflon® film and elastic bands. The resin should be used within four weeks of the preparation. Additional details are found in Section 3.

2.2.3 Silica Gel. Indicating type, 6 to 16 mesh. Dry at 175°C (350°F) for 2 hours before using.

2.2.4 Impinger Solutions. Distilled organic-free water shall be used to charge the impingers. This water should be prescreened for any compounds of interest. One hundred mL will be added to the specified impinger: the third impinger in the train may be charged with a basic solution (1 N sodium hydroxide or sodium acetate) to protect the sampling pump from acidic gases. Sodium acetate should be used when large sample volumes are anticipated, as sodium hydroxide will react with carbon dioxide in aqueous media to form sodium carbonate and possibly plug the impinger. Additional details are found in Section 3.

2.3 Materials and Supplies Needed for Sample Recovery

2.3.1 Methanol/Methylene Chloride. Methanol and methylene chloride are used for sample recovery and clean-up. Screening details are given in Section 3.

2.3.2 Water. Organic-free water shall be used to aid in quantitatively transferring any impinger solutions that will be analyzed.

2.3.3 Probe Liner, Nozzle and Organic Module Brushes. Nylon bristle brushes with stainless steel wire handles are required. The probe brush shall have extensions of stainless steel, Teflon®, or inert material equal to the length of the probe. The brushes shall be properly sized and shaped to brush out the probe liner, the nozzle and the organic module conditioning section.

2.3.4 Wash Bottles. Teflon® or glass wash bottles are required; polyethylene wash bottles should not be used as organic contaminants may be extracted by exposure to organic solvents used for sample recovery.

2.3.5 Glass Sample Storage Containers. Chemically resistant, borosilicate amber and clear glass bottles, 500 mL and 1,000 mL. Screw cap liners shall either be Teflon® or otherwise constructed to be leak free and resistant to chemical attack by organic recovery solvents.

2.3.6 Petri Dishes. Glass, sealed around the circumference with wide (1 in) Teflon® tape, for storage and transport of filter samples.

2.3.7 Graduated Cylinder and/or Triple-Beam Balance. To measure condensate water to the nearest 1 mL or 1 gram. Graduated cylinders shall have subdivisions no greater than 2 mL. Laboratory triple-beam balances capable of weighing to ±0.5 gram are required.

2.3.8 Nalgene® Storage Containers. Screw cap polypropylene or polyethylene containers to store silica gel.

2.3.9 Funnels. Glass funnels are required to aid in the recovery of samples for organic analyses.

2.4 Sample Preparation and Analysis

2.4.1 Gas Chromatograph/Mass Spectrometer (GC/MS). A GC/MS coupled to a computer for data acquisition is required for compound identification and quantification. The GC portion of the instrument should be equipped with a fused silica capillary column and be capable of temperature programming. The mode of sample injection should be on-column, but split/splitless injection is acceptable if the split ratio is accurately known giving adequate detectability. Details of the analytical column and analytical parameters are given in Section 4.4.

The MS portion should have at least the following capabilities:

- electron ionization (EI), 70 ev (nominal);
- scanning 35-450 mass units/second;
- single (or selected) ion monitoring; and
- a minimum detectable limit of approximately 25 ng per component on column.

2.4.2 Glassware. All glassware is to be cleaned before use by the procedure given in Appendix A. A "glassware" blank is required for the Soxhlet extractor, empty glass thimble, and concentration apparatus. The blank is prepared by charging the extractor with 300 mL of the sample extraction solvent, cycling the extractor overnight, concentrating

the solvent to 1 mL and analyzing by GC/MS as described in Section 4.4. This 1 mL sample should be screened for the compounds of interest. (This assay could also serve as the required screening of the extraction solvent as discussed in Section 3.2.2.) Each Soxhlet set-up should be distinctly marked and should have a corresponding sample concentrator identically marked. These two apparatuses should always be used in pairs to facilitate the identification of any contamination problems. If the glassware blank indicates contamination, a solvent rinse of the entire system should be performed, charged with solvent and again cycled overnight as described above. Continue this process until the blank is free of the components of interest at the minimal detection limit (MDL) of the GC/MS. If contamination persists at the same level, the solvent purity should be investigated.

2.4.2.1 Soxhlet Extractor. Consisting of a 500 mL receiver extractor, condenser, and glass thimble with an extra coarse ground glass-frit.

2.4.2.2 Kuderna-Danish Evaporative Concentrator (K-D). 500 mL size with a 15 mL graduated receiver and a Snyder column. Micro K-D's for reducing sample down to 1 mL.

2.4.2.3 Sample Vials. 2 mL and 10 mL size. Vials should be equipped with Teflon®-lined screw caps.

2.4.2.4 Volumetric Flasks. 10-100 mL size. Used for preparing standards.

2.4.2.5 Funnels. Used for transferring solvent to K-D and containing the desiccant, Na_2SO_4.

2.4.2.6 Glass Wool. Cleaned by Soxhlet extraction for 12 hours with extraction solvent. Used as support for bed of Na_2SO_4 desiccant and to prevent the XAD-2® from floating from the thimble during extraction.

2.4.2.7 Miscellaneous Beakers. 10-400 mL size.

2.4.2.8 Disposable Pipets. For transferring sample to vials.

2.4.2.9 Separatory Funnels. 250 and 500 mL size with Teflon® stopcock.

2.4.2.10 Graduated Cylinders. 100 and 500 mL size.

2.4.3 Syringes. 10 and 100 µL size. Use separate syringes for injecting sample into the GC/MS and spiking surrogate compounds.

2.4.4 Drying Oven. Vacuum or convection type. 0-300°C.

2.4.5 Analytical Balance. Capable of weighing to the nearest 0.1 mg.

2.4.6 Stainless Steel Tongs. For transferring thimble to extractor.

2.4.7 Boiling Chips. Teflon® boiling chips, cleaned in batch quantities by Soxhlet extraction for 12 hours using the sample extraction solvent.

3. Reagents

It is imperative that all reagents be screened for organic pollutants (i.e., compounds of interest or compounds that may interfere with the analysis) by GC/MS before use in either sampling or analytical procedures. Once a particular "lot" has been deemed acceptable by the established criteria, the same lot must be used to complete all analyses.

3.1 Solvents. The solvents used for both the sampling and analysis must be screened prior to use regardless of the indicated purity. Solvents can be purchased and screened by "lot number" thus eliminating the necessity to screen each bottle. Solvents classified as "Distilled in Glass", "Pesticide Grade", "GC/MS Grade", etc. are generally free of most impurities.

Organic solvents are screened by concentrating 500 mL of the solvent to 1 mL and analyzing by GC/MS as described in Section 4.4. The presence of any compound of interest at a level greater than 5 µg/mL (5 ng/µL) in the concentrate will be cause for the rejection of the particular lot number.

Organic-free water is screened by solvent extraction, utilizing a separatory funnel. A 200 mL aliquot is extracted three times with 50 mL portions of pre-screened methylene chloride. The extract is concentrated to 1 mL and analyzed by GC/MS. The presence of any compound of interest at a level greater than 5 µg/mL will be cause for the rejection of the particular lot number.

3.2 Sodium Sulfate (Na_2SO_4). Sodium sulfate is used to remove any traces of water from the solvents before concentration. Reagent grade Na_2SO_4 is cleaned by multiple washings (5-6) with the sample extraction solvent. The cleaned Na_2SO_4 is dried in an oven (vacuum, preferably; convection, alternatively) at 105°C.

3.3 Deionized Organic-Free Water. Water suitable for washing glassware is prepared by first treating with ion-exchange resins followed by charcoal filtration. Water prepared in this manner should exhibit a resistivity in excess of 18 meg-ohms. The organics level is greatly reduced over tap water but the "organic-free" water is generally not free of trace levels of organics. Organic-free water is also commercially available.

3.4 XAD-2® Resin. XAD-2® (20/60 mesh) can be obtained from any of several vendors of chromatography supplies and accessories either precleaned or as supplied by the manufacturer. (Precleaned resin is defined by the procedure given in EPA 600/7-78-201, Appendix B.) Precleaned resin should be screened before use by subjecting a 20 g portion to solvent extraction and analysis procedures. New XAD-2® should be cleaned by the procedure outlined in Appendix B of this method with the final extraction solvent being concentrated and screened for impurities by GC/MS. If the cleanliness criteria are not met, repeat the final extraction step until the criteria are met. If the resin is not deemed "clean" by the third repeat, check for sources of contamination such as glassware and/or solvent. The glassware and solvents can be screened for contaminants by performing an extraction/analysis sequence without the presence of XAD-2®. The final extraction solvent is defined as the solvent to be used to extract the sample components from the XAD-2® after sampling. The resin may be extracted in small batches, individually screened, and then combined (if desired) or extracted in bulk. The cleaned resin can be stored in clean amber jars at room temperature (25°C) or less in an area that has minimal levels of possible contaminants (i.e., do not store in a refrigerated area used to contain samples and/or standards). Alternatively, the resin can be packed in the glass sampling modules and capped. Sampling should be scheduled as soon as possible after resin clean-up has been

completed. The shelf life has been determined to be about four weeks. The XAD-2® sampling modules should be shipped to and from the laboratory on ice.

3.5 Standards. Standards, as the neat compound, should be obtained in the purest form available, usually "99+ percent purity." These compounds should also be obtained in the stable isotopic labeled form, if possible, for use as surrogate spikes.

3.6 Nitrogen. High purity nitrogen (see Appendix B) in compressed gas cylinders is required for sample concentration and the removal of solvent from the XAD-2® resin after clean-up.

3.7 Helium. High purity helium (<0.5 ppm total hydrocarbon) in compressed gas cylinders is used as carrier gas for the GC/MS.

4. Procedure

4.1 Sampling.

4.1.1 Pretest Preparation. The complexity of this method is such that, in order to obtain reliable results, field personnel shall be trained in the use of the test procedures. All the components shall be maintained and calibrated according to the procedure described by Rom[6] unless otherwise specified.

Weigh several 200 to 300 g portions of silica gel in air-tight containers to the nearest 0.5 g. Record on each container the total weight of the silica gel plus container. As an alternative, the silica gel need not be preweighed, but may be weighed directly in the impinger or sampling holder just prior to train assembly.

Check filters visually against light for irregularities and flaws or pinhole leaks. Filters should be preweighed if particulate loading is to be determined. Label the shipping containers (glass petri dishes) and keep the filters in these containers at all times except during sampling.

4.1.2 Preliminary Determination. Select the sampling site and the minimum number of sampling points according to EPA Method 1.[2] Determine the stack pressure, temperature, and the range of velocity heads using EPA Method 2.[2] It is recommended that a leak-check of the pitot lines (EPA Method 2,[2] Section 3.1) be performed. Determine the stack gas

moisture content using the EPA Approximation Method 4[2] or its alternatives to establish estimates of isokinetic sampling rate settings. Determine the stack gas dry molecular weight, as described in EPA Method 2,[2] Section 3.6. If the integrated EPA Method 3[2] sampling is used for molecular weight determination, the integrated bag sample shall be taken simultaneously with, and for the same total length of time as, the sample run.

Select a nozzle size based on the range of preliminary gas stream velocity measurements so that it is not necessary to change the nozzle in order to maintain isokinetic sampling rates. During the run, do not change the nozzle. Ensure that the proper differential pressure gauge is chosen for the range of velocities encountered; see Section 2.2 of EPA Method 2.[2]

Select a suitable probe liner and probe length so that all traverse points can be sampled. For large stacks, consider sampling from opposite sides of the stack to reduce the length of the probe.

Typically three (3) dscm (105.9 dscf) of sample volume is required for the determination of the Destruction and Removal Efficiency (DRE) of POHC's from incineration systems.[10] Additional sample volume shall be collected as necessitated by analytical detection limit constraints. Consideration should also be given to specific retention volume data on a compound by compound basis. If such data are not available, the information must be established for the compound(s) of interest to avoid inaccurate results.

Determine the total length of sampling time needed to obtain the identified minimum volume by comparing the anticipated average sampling rate to the volume requirement. Allocate the same time to each traverse point defined by EPA Method 1.[2] The length of time sampled at each traverse point should be an integer or an integer plus one half minute to avoid timekeeping errors.

In some circumstances, (e.g., incinerator waste being fed in batches) it may be necessary to sample for shorter times at the traverse points and to obtain smaller gas sample volumes.

4.1.3 Preparation of the Collection Train. During preparation and assembly of the sampling train, keep all openings where contamination can occur covered with Teflon® film or aluminum foil until just prior to assembly or until sampling is initiated.

The XAD-2® sorbent traps are prepared in the laboratory by filling with 20 grams of clean resin. While filling, distribute the resin uniformly to eliminate the possibility of channeling. When freshly cleaned, many adsorbent resins carry a static charge, causing the resin to cling to the trap walls. This may be minimized by filling the trap in the presence of an ionizing source such as Polonium-210 which acts as an antistat to remove the static charge carried by the resin. Commercial antistatic devices are the Model-204®* and Model-210®*, available from the 3-M Company, Inc., St. Paul, MN.

Place 100 mL of distilled-deionized organic-free water in each of the first two impingers following the knockout trap, leave the third impinger empty (or charge with caustic solution as necessary), and transfer approximately 200 to 300 g of preweighed silica gel from its container to the fourth impinger. More silica gel may be used, but care should be taken to ensure that it is not entrained and carried out from the impinger during sampling. Place the container in a clean place for later use in the sample recovery. Alternatively, the silica gel plus impinger may be weighed together to the nearest 0.5 g and the weight recorded.

Using tweezers or clean disposable surgical gloves, place a labeled (identified) filter in the filter holder. Be sure that the filter is properly centered and the gasket placed to prevent the sample gas stream from bypassing the filter. Visually check the filter for tears or lifting after assembly is complete.

When glass liners are used, install the selected nozzle using a Viton-A O-ring if stack temperatures are less than 260°C (500°F) and a woven glass fiber gasket when temperatures are higher. See Rom[6] for

---

*Registered trademarks of the 3-M Company, Inc., St. Paul, MN.

details. Other connecting systems using either 316 stainless steel or Teflon® ferrules may be used. When metal liners are used, install the nozzle as above or by a leak-free direct mechanical connection.

Set up the train as in Figure 2-1. If necessary, a glass cyclone may be used between the probe and the filter holder when the total particulate catch is expected to contain large particles or when water droplets are present in the stack.

Connect all temperature sensors to an appropriate potentiometer/ display unit. Check all temperature sensors at ambient temperature.

Place crushed ice around the impingers and the organic module condensate knockout.

Turn on the sorbent module and condenser coil coolant recirculating pump and begin monitoring the sorbent module gas entry temperature. Insure proper sorbent module gas entry temperature before proceeding and again before any sampling is initiated. It is extremely important that the XAD-2® resin temperature never exceed 50°C (122°F), as thermal decomposition will occur. During testing, the XAD-2® temperature must not exceed 20°C (68°F) for efficient capture of the semivolatile species of interest.

Turn on and set the filter and probe heating systems at the desired operating temperatures. Allow time for the temperatures to stabilize.

4.1.4 Leak-Check Procedures.

4.1.4.1 Pretest Leak-Check. Since the number of additional intercomponent connections in the Semi-VOST train (over the M5 Train) increases the possibility of leakage, a pretest leak-check is required.

A lower vacuum may be used, provided that it is not exceeded during the test. Leak test by first attaching to the inlet of the filter holder (cyclone, if applicable) a carbon-filled leak check impinger shown in Figure 4-1, plugging the inlet and evacuating to 381 mm Hg (15 in Hg). Once the train has passed the leak check criteria, the probe should be connected to the train, the end plugged, and the train leak-checked at 25 mm Hg (1 in Hg). Alternatively, the probe may be leak-checked simultaneously with the rest of the sampling train, in one step, at 381 mm Hg (15 in Hg) vacuum. A leakage rate in excess of 4 percent of the average sampling rate or 0.00057 m^3/min (0.02 cfm), whichever is less, is unacceptable and must be corrected.

CROSS SECTIONAL VIEW

Leak Testing Apparatus

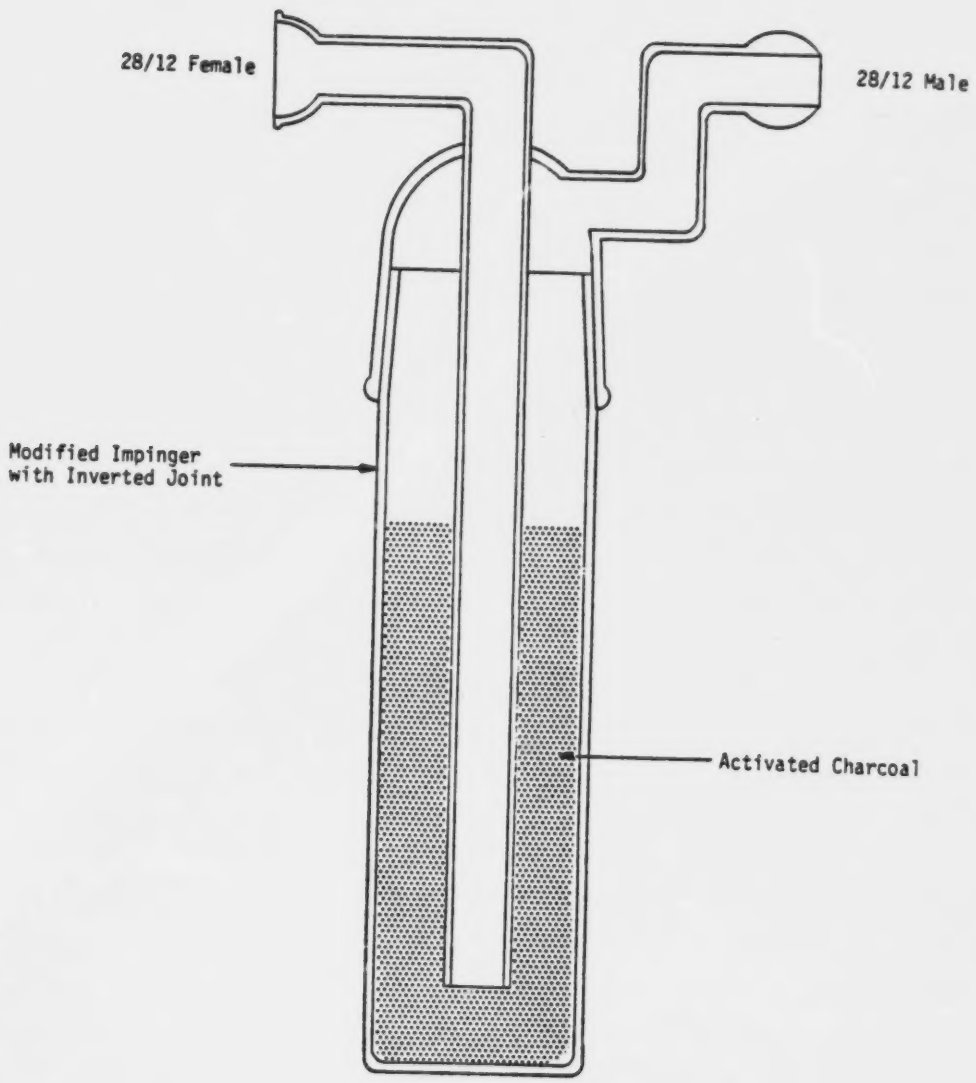

Figure 4-1. Leak check impinger.

These specific leak-testing instructions described in Rom[6] are strongly recommended. Start the pump with fine adjust valve fully open and coarse adjust valve completely closed. Partially open the coarse adjust valve and slowly close the fine adjust valve until the desired vacuum is reached. Do not reverse direction of the fine adjust valve; this will cause water to back up into the organic module or between the impingers. If the desired vacuum is exceeded, leak-check as instructed below and begin again.

When the leak-check is completed, slowly remove the plug from the inlet to the leak check apparatus. When the vacuum drops to 127 mm (5 in) Hg or less, immediately close the coarse adjust valve. Switch off the pumping system and reopen the fine adjust valve. Do not reopen the fine adjust valve until the coarse adjust valve has been closed to prevent the water in the impingers from being forced backward or the organic module and the silica gel from being entrained backward into the third impinger.

4.1.4.2 Leak-Checks During Sampling Run. If during the sampling run, a component (e.g., filter assembly, impinger or sorbent trap) change becomes necessary, a leak-check shall be conducted immediately after the interruption of sampling and before the change is made. The leak-check shall be done according to the procedure outlined in Section 4.1.4.1 except that it shall be done at a vacuum equal to or greater than the maximum value recorded at that point in the test. If the leakage rate is found to be no greater than 0.00057 m^3/min (0.02 cfm) or 4 percent of the average sampling rate, the results are acceptable, and no correction will need to be applied to the total volume of dry gas metered. If, however, a higher leakage rate is obtained, the tester shall void the run unless it is impossible to repeat, in which case he/she shall record the leakage rate and plan to correct the sample volume as shown in Section 6.2 of this method. It should be noted that correction of the sample volume in this manner reduces the integrity of the pollutant concentrations data generated and must be avoided.

Immediately after a component change, and before sampling is re-initiated, a leak-check similar to a pretest leak-check must also be conducted.

4.1.4.3 Post-Test Leak-Check. A leak-check is mandatory at the conclusion of each sampling run. Use the procedure outlined above insuring that the leak-check is conducted at a vacuum equal to or greater than the maximum value recorded during the sampling run. If the leakage rate is found to be not greater than 0.00057 m^3/min (0.02 cfm) or 4 percent of the average sampling rate (whichever is less), the results are acceptable. If, however, a higher leakage rate is obtained, the tester shall attempt to repeat the run as previously discussed. If the run cannot be repeated, the tester shall record the leakage rate, correct the volume as shown in Section 6.2 of this method and shall consider the data obtained of questionable reliability.

4.1.5 Sample Collection. During the sampling run, maintain an isokinetic sampling rate to within 10 percent of true isokinetic. Maintain a temperature around the filter of 120 ± 14°C (248 ± 25°F) and a gas temperature entering the sorbent trap at a maximum of 20°C (68°F).

For each run, record the data required on a data sheet. Take care to record the initial dry gas meter reading. Record the dry gas meter readings at the beginning and end of each sampling time increment, when changes in flow rates are made, before and after each leak-check, and when sampling is halted. Take readings at least once at each sampling point during each time increment. Level and zero the manometer initially and periodically throughout the sampling run.

Clean the stack access ports prior to the test run to eliminate the possibility of sampling deposited material. To begin sampling, remove the nozzle covering, verify that the filter and probe heating systems are at the specified temperature, and that the pitot tube and probe are properly positioned. Place the nozzle at the first traverse point with the tip pointing directly into the gas stream. Immediately start the pump and adjust the flow to isokinetic conditions. Nomographs are available which aid in the rapid adjustment of the isokinetic sampling rate without excessive computations. These nomographs are designed for use when the Type S pitot tube coefficient is 0.84 ± 0.02, and the stack gas equivalent density (dry molecular weight) is equal to 29 ± 4. Rom[6] details the procedure for using the nomographs. If the stack gas

molecular weight and the pitot tube coefficient are outside the stated ranges, do not use the nomographs unless appropriate steps are taken to compensate for the deviations.[7]

When the stack is under significant negative pressure (equivalent to the height of impinger stem) take care to close the coarse adjust valve before inserting the probe into the stack to prevent water from backing into the organic module. It may be necessary to turn the pump on with the coarse adjust valve closed.

When the probe is in position, block off the openings around the probe and stack accesss port to prevent unrepresentative dilution of the gas stream.

Traverse the stack cross-section, as required by EPA Method 1.[2] Take care not to bump the probe nozzle into the stack walls when sampling near the walls or when removing and inserting the probe through the access port.

During the test run, make periodic adjustments to keep the temperature of the filter holder and the organic module at the proper level; add more ice and, if necessary, salt to maintain a temperature of less than 20°C (68°F) at the condenser outlet.

If the pressure drop across the filter or sorbent trap becomes too high, making isokinetic sampling rates difficult to maintain, the filter/sorbent trap may be replaced in the midst of a sample run. It is recommended that another complete filter holder/sorbent trap assembly be used rather than attempting to change the filter and resin themselves. After a new filter holder/sorbent trap assembly is installed, conduct a leak-check.

A single train shall be used for the entire sample run, except in cases where simultaneous sampling is required in two or more separate ducts or in cases where equipment failure necessitates a change of trains.

Note: When two or more trains are used, separate analysis of the front-half (if applicable) organic module and impinger (if applicable) catches from each train may be performed, unless identical nozzle sizes were used on all trains. Then the front-half catches from the individual trains may be combined (as may the impinger

catches) and one analysis of front-half catch and one analysis of impinger catch may be performed.

At the end of the sample run turn off the coarse adjust valve, remove the probe and nozzle from the stack, turn off the pump, record the final dry gas meter reading, and conduct a post-test leak-check. Leak-check the pitot lines as described in EPA Method 2,[2] Section 3.1. The lines must pass this leak-check in order to validate the velocity head data.

4.1.6 Calculation of Percent Isokinecity. Calculate percent isokineticity (see Calculations, Section 6) to determine whether the results are acceptable or whether another test run should be made.

4.2 Sample Recovery.

4.2.1 Disassembly of the Semi-VOST Train. Proper cleanup procedure begins as soon as the probe is removed from the stack at the end of the sampling period. Allow the probe to cool.

4.2.1.1 When the probe can be handled safely, wipe off all external particulate matter near the tip of the probe nozzle and place a cap over it to prevent losing or gaining particulate matter. Do not cap the probe tip tightly while the sampling train is cooling, as this will create a vacuum in the filter holder drawing water from the impingers back into the sorbent module.

Before moving the sampling train to the cleanup site, remove the probe from the sample train and cap the open outlet, taking care not to lose any condensate that might be present. Cap the filter inlet. Remove the umbilical cord from the last impinger. If a flexible line is used between the organic module and the filter holder, disconnect the line at the filter holder and let any condensed water or liquid drain into the organic module.

4.2.1.2 Cap the filter holder outlet and the inlet to the organic module. Separate the sorbent trap section of the organic module from the condensate knockout trap and the gas conditioning section. Cap all organic module openings. Disconnect the organic module knockout trap from the impinger train inlet and cap both of these openings. Ground glass stoppers, Teflon® caps or caps of other inert materials may be used to seal all openings.

4.2.1.3 Transfer the probe, the filter, the organic module components and the impinger assembly to the clean-up area. This area should be clean and protected from the elements to minimize sample contamination or loss.

4.2.1.4 Save a portion of all washing solutions (methanol/methylene chloride, distilled-deionized water) used for cleanup as a blank. Transfer 200 mL of each solution directly from the wash bottle used and place them in separate labeled glass sample containers.

4.2.1.5 Inspect the train prior to and during disassembly and note any abnormal conditions.

4.2.2 Sample Handling and Transfer. Step-by-step sample handling and transfer procedures are outlined below. Flow diagrams for these recovery procedures are presented in Figures 4-2, 4-3, and 4-4. An example coding format for Semi-VOST samples follows in Table 4-1.

4.2.3 Probe, Nozzle, Cyclone (if used), Filter Recovery.

4.2.3.1 Carefully remove the filter from the filter holder and place it in its identified petri dish. Use two pairs of tweezers to handle the filter. If it is necessary to fold the filter, insure that the particulate cake is inside the fold. Carefully transfer to the petri dish any particulate matter and/or filter fibers which adhere to the filter holder gasket, using a dry nylon bristle brush and/or a sharp-edged blade. Label the container and seal with wide (1 in) Teflon® tape around the circumference of the lid.

4.2.3.2 Taking care to see that dust on the outside of the probe or other exterior surfaces does not contaminate the sample, quantitatively recover particulate matter or any condensate from the probe nozzle, probe liner, and front half of the filter holder by washing these components first with 50 to 75 mL of methanol and then an equal volume of methylene chloride into a glass container. Distilled water may also be used. Retain a water and solvent blank and analyze in the same manner as the samples. Perform rinses as follows:

Carefully remove the probe nozzle and clean the inside surface by rinsing with the solvent mixture (1:1 v/v methanol/methylene chloride) from a wash bottle and brushing with a nylon bristle brush. Brush until the rinse shows no visible particulate material. Then make a final rinse of the inside surface with the solvent mix.

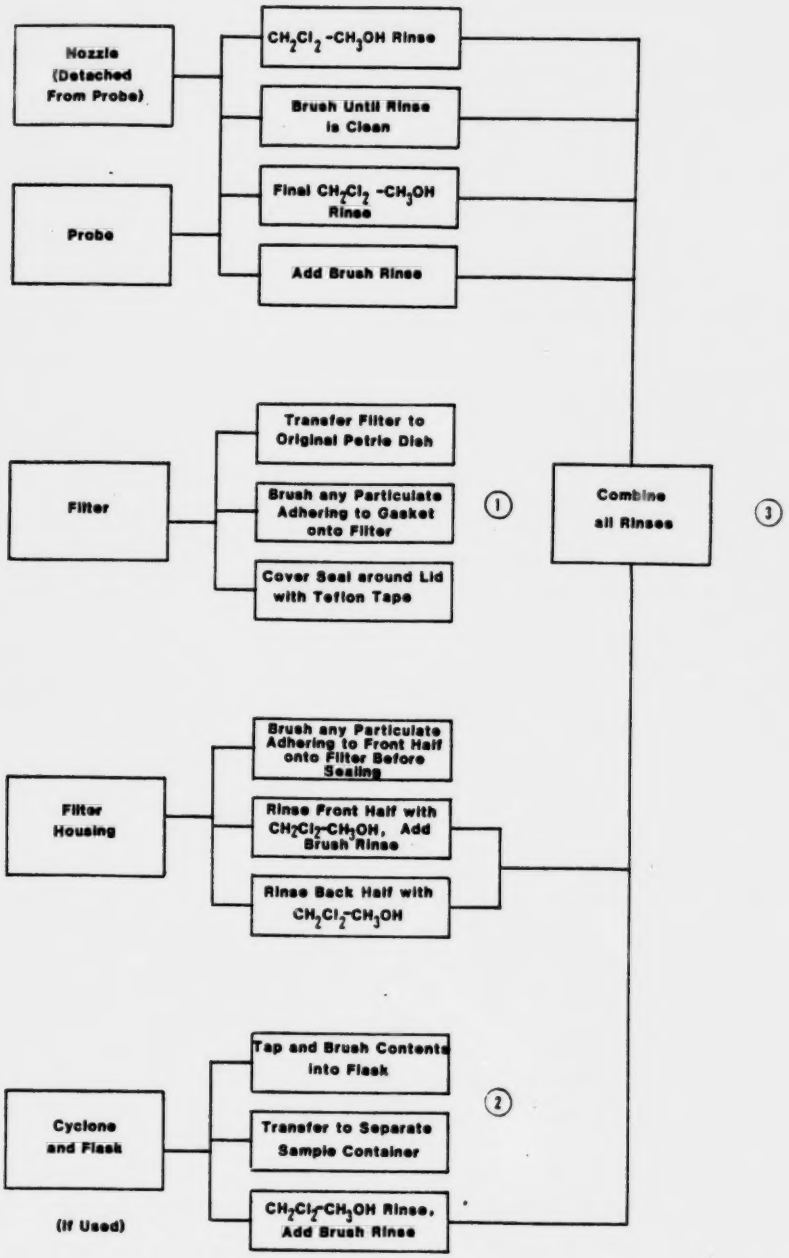
Nozzle (Detached From Probe)
Probe
CH_2Cl_2 -CH_3OH Rinse
Brush Until Rinse is Clean
Final CH_2Cl_2 -CH_3OH Rinse
Add Brush Rinse
Filter
Transfer Filter to Original Petrie Dish
Brush any Particulate Adhering to Gasket onto Filter
Cover Seal around Lid with Teflon Tape
1
Combine all Rinses
3
Filter Housing
Brush any Particulate Adhering to Front Half onto Filter Before Sealing
Rinse Front Half with CH_2Cl_2-CH_3OH, Add Brush Rinse
Rinse Back Half with CH_2Cl_2-CH_3OH
Cyclone and Flask
(If Used)
Tap and Brush Contents into Flask
Transfer to Separate Sample Container
CH_2Cl_2-CH_3OH Rinse, Add Brush Rinse
2
Notes: All Containers for Samples for Organic Analysis must be Glass.
Use Teflon or Glass Wash Bottles. Teflon is Preferred.

Figure 4-2. Semi-VOST train sample handling and transfer: nozzle, probe, cyclone (if used) and filter.

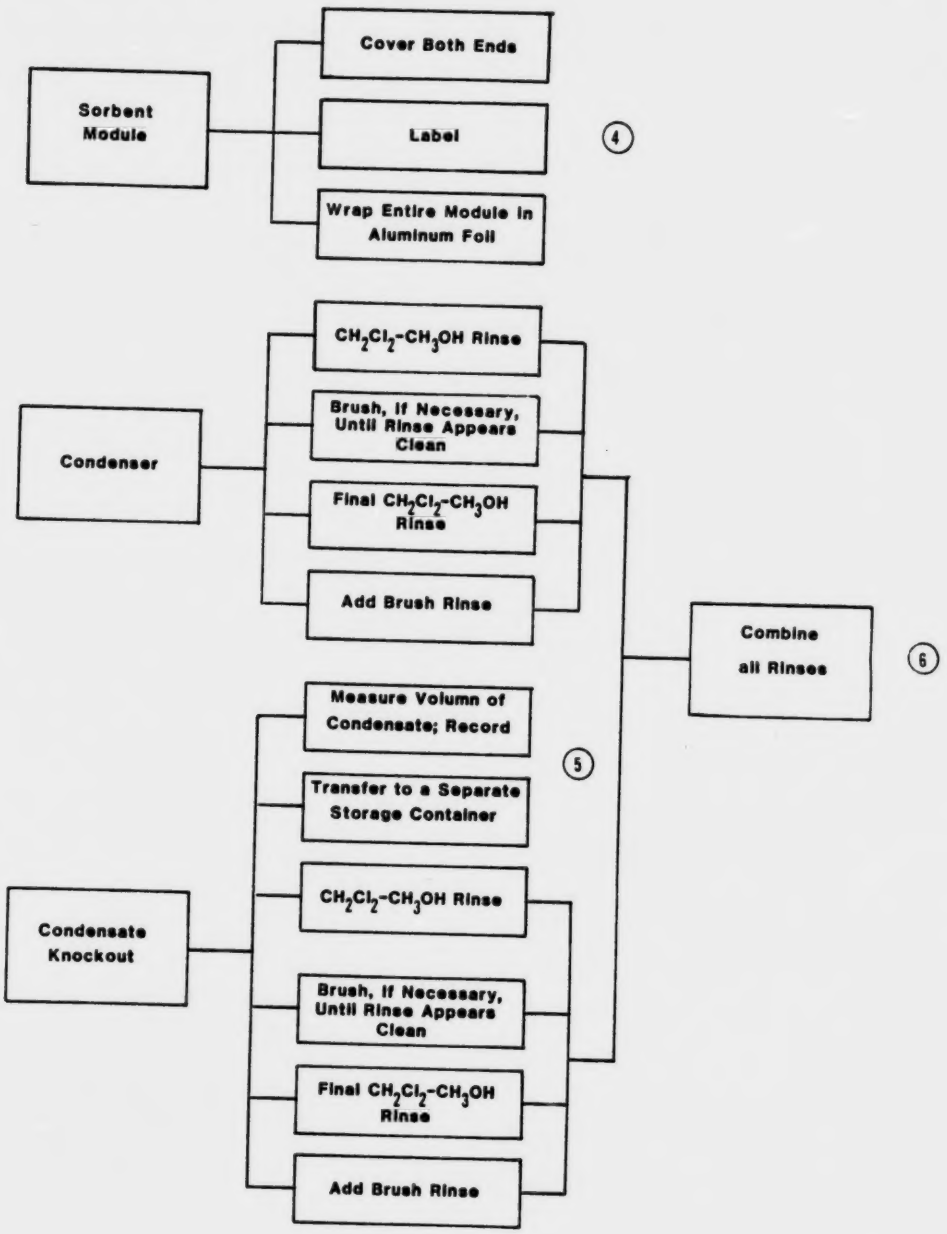

Figure 4-3. Semi-VOST train sample handling and transfer: organic module section.

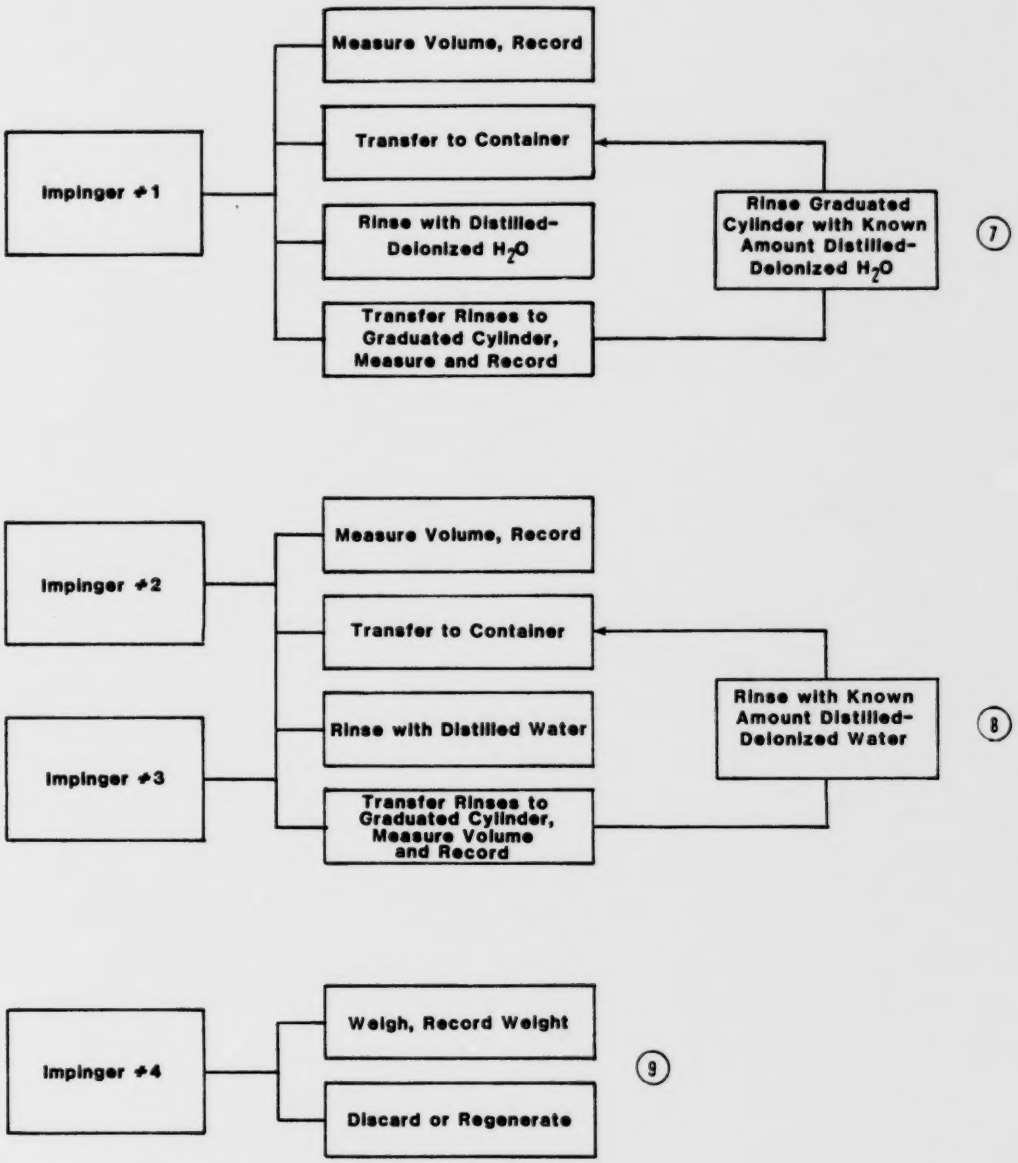

Figure 4-4. Semi-VOST train sample handling and transfer: impinger train.

Table 4-1. EXAMPLE CODING FORMAT FOR SEMI-VOST TRAIN SAMPLES

Sample code	Order of recovery[a]	Container	Size	Sample preparation[b]	Sample description
PF	1	Glass petri dish(es)	150 mm diameter	4.3.4	Particulate filter(s)
CC	2	Amber glass	100 mL, widemouth	4.3.4	Cyclone catch (if applicable)
FHR	3	Clear glass[c]	1 L	4.3.5	Front-half rinse (50:50 methanol/methylene chloride) i.e., nozzle, probe, filter housing, cyclone
SRB		Clear glass[c]	500 mL	4.3.5	Solvent rinse blank (50:50 methanol/methylene chloride)
XAD	4	Sampling module	100 mL, widemouth or capped sorbent traps	4.3.3	XAD-2® resin sample(s)
CD	5	Amber glass	1 L	4.3.1	Condensate knockout catch
BHR	6	Clear glass[c]	1 L	4.3.5	Back-half rinse (50:50 methanol/methylene chloride) i.e., condenser and knockout traps

(continued)

Table 4-1. Concluded

Sample code	Order of recovery[a]	Container	Size	Sample preparation[b]	Sample description
I-1	7	Amber glass	1 L	4.3.2	First impinger catch and rinse
I-1B		Amber glass	1 L	4.3.2	First impinger blank (appropriate collecting solution)
I-2,3	8	Amber glass	1 L	4.3.2	Second and third impinger catches combined and rinsed
I-2,3B		Amber glass	1 L	4.3.2	Second and third impinger blank (appropriate collecting solution)
I-4	9	Clear glass	1 L	4.2.5	Silica gel

[a]See Figures 4-2, 4-3, and 4-4.

[b]See appropriate sections of the Semi-VOST method.

[c]Must be clear to allow tester to verify when components have been "rinsed clean"; cover with aluminum foil to protect sample from light.

Have two people rinse the probe liner with the solvent mix by tilting and rotating the probe while squirting solvent into its upper end so that all inside surfaces will be wetted with solvent. Let the solvent drain from the lower end into the sample container. A funnel (glass) may be used to aid in transferring liquid washes to the container. Follow the solvent rinse with a brushing. Both persons should support the probe in an inclined position, while one sprays solvent into the upper end of the liner as the other pushes the probe brush with a twisting action through the probe; the second person must place a sample container underneath the lower end of the probe, and catch any solvent and particulate matter which is brushed from the probe. Run the brush through the probe three or more times until no visible particulate material is carried out with the solvent or until none remains in the probe liner on visual inspection. With stainless steel or other metal probes, it is necessary to run the brush through in this manner at least six times since these probes have small crevices in which particulate matter can be entrapped. Rinse the brush with solvent, and quantitatively collect these washings in the sample container. After the brushing, make a final solvent rinse of the probe. Between sampling runs, keep brushes clean and protected from contamination.

4.2.3.3 Clean the inside of the front half of the filter holder and cyclone/cyclone flask, if used, by rubbing the surfaces with a nylon bristle brush and rinsing with methanol/methylene chloride (50:50) mixture. Rinse each surface at least three times to remove visible particulate. Make a final rinse of the brush and filter holder. Carefully rinse out the glass cyclone and cyclone flask (if used). Brush and rinse any particulate material adhering to the inner surfaces of these components into the front-half rinse sample. After all solvent washings and particulate matter have been collected, tighten the sample container lid so that solvent will not leak out upon shipment to the laboratory. Mark the height of the fluid level to allow determination of whether or not leakage occurred during transport. Label the container clearly to identify its contents.

4.2.4 Condenser, Sorbent Module and Condensate Knockout Recovery.

4.2.4.1 The sorbent trap section of the organic module is used as a sample transport container. Ground glass stoppers or Teflon® caps are used to seal the ends. The sorbent trap should then be labeled, covered with aluminum foil and transported to the laboratory on ice.

4.2.4.2 Measure the volume of condensate collected in the condensate knockout section of the organic module to within ±1 mL using a graduated cylinder or by weighing to within ±0.5 g using a triple-beam balance. Record the volume or weight of liquid present, and note any discoloration or film in the liquid catch. Transfer this liquid to a labeled glass container. Inspect the backhalf of the filter housing, and the gas conditioning section of the organic module. If condensate is observed, transfer it to a graduated or weighing bottle and measure the volume as described above. Add this material to the condensate knockout trap catch.

4.2.4.3 All sampling train components located between the high efficiency glass or quartz fiber filter and the first wet impinger (including the heated Teflon® line connecting the filter outlet to the condenser) should be thoroughly rinsed with methanol/methylene chloride (50:50) mixture, and the rinsings combined. The rinsings shall be separated from the condensate. Whenever train components are brushed, the brush should be subsequently rinsed with solvent mixture and the rinsings added to the appropriate sample.

4.2.5 Silica Gel and Impingers Recovery.

4.2.5.1 Note the color of the indicating silica gel to determine if it has been completely spent and make a notation of its condition. Transfer the silica gel from the fourth impinger to its original container and seal. A funnel may facilitate pouring the silica gel without losses. A rubber policeman may be used to aid in removing the silica gel from the impinger. It is not necessary to remove the small amount of dust particles that may adhere to the impinger wall and are difficult to remove. Since the gain in weight is to be used for moisture calculations, do not use water or other liquids in the transfer. If a balance is available in the field, weigh the container and its contents to 0.5 g or better.

4.2.5.2 Recover the impingers as follows: Make a notation of any color or film in the liquid catch. Measure the liquid which is in the first three impingers to within ±0.5 g by using a triple-beam balance (if one is available). Record the volume or weight of liquid present. This information is required to calculate the moisture content of the effluent gas.

Amber glass containers are used for storage of the impinger catches.

4.2.6 Sample Preparation for Shipment. Prior to shipment recheck all sample containers to insure that the caps are well-secured. Seal the lids of all containers around the circumference with Teflon® tape. Ship all liquid samples upright on ice and all particulate filters with the particulate catch facing upward. The particulate filters should be shipped unrefrigerated.

4.3 Sample Preparation for Analysis. The preparation steps for all samples will result in a finite volume of concentrated solvent. The final sample volume (usually in the 1-10 mL range) is then subjected to analysis by GC/MS. All samples should be inspected and the appearance documented. All samples are to be spiked with surrogate standards as received from the field prior to any sample manipulations. The spike should be at a level equivalent to 10 times the MDL when the solvent is reduced in volume to the desired level (i.e., 10 mL). The spiking compounds should be the stable isotopically labeled analog of the compounds of interest or a compound that would exhibit properties similar to the compounds of interest, be easily chromatographed, and not interfere with the analysis of the compounds of interest. Suggested surrogate spiking compounds are: deuterated napthalene, chrysene, phenol, nitrobenzene, chlorobenzene, toluene, and carbon-13-labeled pentachlorophenol.

4.3.1 Condensate. The "condensate" is the moisture collected in the first impinger following the XAD-2® module. Spike the condensate with the surrogate standards. The volume is measured and recorded and then transferred to a separatory funnel. The pH is to be adjusted to pH 2 with 6 N sulfuric acid if necessary. The sample container and graduated cylinder are sequentially rinsed with three successive 10 mL aliquots of the extraction solvent and added to the separatory funnel.

The ratio of solvent to aqueous sample should be maintained at 1:3. Extract the sample by vigorously shaking the separatory funnel for five minutes. After complete separation of the phases, remove the solvent and transfer to a K-D, filtering through a bed of precleaned, dry sodium sulfate. Repeat the extraction step two additional times. Adjust the pH to 11 with 6 Nsodium hydroxide and re-extract combining the acid and base extracts. Rinse the sodium sulfate into the K-D with fresh solvent and discard the desiccant. Add Teflon® boiling chips and concentrate to 10 mL by reducing the volume to slightly less than 10 mL and then bringing to volume with fresh solvent. In order to achieve the necessary detection limit, the sample volume can be further reduced to 1 mL by using a micro column K-D or nitrogen blow-down. Should the sample start to exhibit precipitation, the concentration step should be stopped and the sample redissolved with fresh solvent taking the volume to some finite amount. After adding a standard (for the purpose of quantitation by GC/MS) the sample is ready for analysis as discussed in Section 4.4.

4.3.2 Impinger Contents. Spike the sample with the surrogate standards, measure and record the volume and transfer to a separatory funnel. Proceed as described in Section 4.3.1.

4.3.3 XAD-2®. Spike the resin directly with the surrogate standards. Transfer the resin to the all glass thimbles by the following procedure. (Care should be taken so as not to contaminate the thimble by touching it with anything other than tweezers or other solvent-rinsed mechanical holding devices.) Suspend the XAD-2® module directly over the thimble. The glass frit of the module (see Figure 2-2) should be in the up position. The thimble is contained in a clean beaker which will serve to catch the solvent rinses. Using a Teflon® squeeze bottle, flush the XAD-2® into the thimble. Thoroughly rinse the glass module with solvent into the beaker containing the thimble. Add the XAD-2® glass wool plug to the thimble. Cover the XAD-2® in the thimble with a precleaned glass wool plug sufficient to prevent the resin from floating into the solvent reservoir of the extractor. If the resin is wet, effective extraction can be accomplished by loosely packing the resin in the thimble. If a question arises concerning the completeness of the

extraction, a second extraction without a spike is advised. The thimble is placed in the extractor and the rinse solvent contained in the beaker is added to the solvent reservoir. Additional solvent is added to make the reservoir approximately two-thirds full. Add Teflon® boiling chips and assemble the apparatus. Adjust the heat source to cause the extractor to cycle 5-6 times per hour. Extract the resin for 16 hours. Transfer the solvent and three 10-mL rinses of the reservoir to a K-D and concentrate as described in Section 4.3.1.

4.3.4 Particulate Filter (and cyclone catch). If particulate loading is to be determined, weigh the filter (and cyclone catch, if applicable). The particulate filter (and cyclone catch, if applicable) is transferred to the glass thimble and extracted simultaneously with the XAD-2® resin.

4.3.5 Train Solvent Rinses. All train rinses, (i.e., probe, impinger, filter housing) using the extraction solvent and methanol are returned to the laboratory as a single sample. If the rinses are contained in more than one container the intended spike is divided equally among the containers proportioned from a single syringe volume.

Transfer the rinse to a separatory funnel and add a sufficient amount of organic-free water so that the methylene chloride becomes immiscible and its volume no longer increases with the addition of more water. The extraction and concentration steps are then performed as described in Section 4.3.1.

4.4 Sample Analysis. The primary analytical tool for the measurement of emissions from hazardous waste incinerators is GC/MS using fused silica capillary GC columns. Because of the nature of GC/MS instrumentation and the cost associated with sample analysis pre-screening of the sample extracts by gas chromatography/flame ionization detection (GC/FID) or with electron capture GC/ECD is encouraged. Information regarding the complexity and concentration level of a sample prior to GC/MS analysis can be of enormous help. This information can be obtained by using either capillary columns or less expensive packed columns. However, the FID screen should be performed with a column similar to that used with the GC/MS. Keeping in mind that GC/FID has a slightly lower detection limit than GC/MS, the concentration of the sample can be adjusted either up or down prior to analysis by GC/MS.

The mass spectrometer will be operated in a full scan (40 to 450) mode for most of the analyses. The range for which data are acquired in a GC/MS run will be sufficiently broad to encompass the major ions, as listed in Appendix C of this document, for each of the designated POHCs in an incinerator effluent analysis.

For most purposes, electron ionization (EI) spectra will be collected since a majority of the POHCs give reasonable EI spectra. Also, EI spectra are compatible with the NBS Library of Mass Spectra and other mass spectral references, which aid in the identification process for other components in the incinerator process streams.

To clarify some identifications, chemical ionization (CI) spectra using either positive ions or negative ions will be used to elucidate molecular weight information and simplify the fragmentation patterns of some compounds. In no case, however, should CI spectra alone be used for compound identification.

4.4.1 GC Conditions. The GC should be equipped with fused silica capillary columns for compound separation. Fused silica columns provide the compound separation often necessary for accurate quantitation of a complex sample. Additionally, the inertness of the column itself greatly improves the versatility for samples that contain both polar and non-polar compounds. The conditions for the GC are given below.

- Column: 30 m x 0.32 mm ID fused silica capillary (1 μ film thickness), coated with SE-54 or equivalent.
- Injector Temperature: 280°C.
- Column Temperature: 40°C for 4 minutes then 40-270°C @ 10°/minute. Hold at 270°C until no evidence of eluting peaks.
- Carrier Gas: High purity He flowing @ 1 mL/minute.
- Injection Volume: 1 μL.
- Electron Energy: 70 eV (nominal).

The injection system can be either on-column or split/splitless. The column performance should be checked at least weekly by injecting a test mixture (such as a Grob mix) commercially available from suppliers of chromatography accessories.

The temperature program may be changed if required to accomplish a difficult separation.

4.4.2 MS Conditions. In general, the cycle time between collections of complete mass spectra needs to be selected to be compatible with elution of the components in the sample. For capillary column GC separations, the cycle time will be on the order of one second. Longer cycle times may lead to distortion of the spectra. To adequately characterize a GC peak, at least five spectra will be collected across the peak. For low level components in the extract, the elution peak may be less than 3 seconds wide and it might not be possible to collect enough scans to characterize the GC peak, if the scan repetition rate were greater than 1 second.

To insure consistency with sources of mass spectra, the GC instrumentation will be tuned to meet the spectral criteria for decafluorotriphenylphosphine. The criteria for meeting the tuning requirements are found in EPA Federal Register Method 625 and summarized in Table 4-2.

Typical MS conditions are given as follows.

- Scan Range: 40 to 450 amu.
- Scan Rate: 1 scan/second.

4.4.2.1 Qualitative Identification. The identification of organic POHCs is based both on the chromatographic elution of those compounds and on the specificity of the detection system. The relative retention time of a POHC compared to an appropriate internal standard is generally constant to within about ±0.2 percent, depending upon the compound. For GC/MS, a match in both the relative retention time for the POHCs and the simultaneous elution of multiple analytical ions specific to that POHC will serve to establish the qualitative identification of the components of the sample.

For directed analyses, where specific POHCs are to be measured in the sample, the identification criteria to confirm the presence of a POHC by MS are that the GC retention time for the suspect peak relative to some standard match that for the corresponding POHC and that the characteristic ions of the suspected POHC are present in the unknown

Table 4-2. TUNE CRITERIA FOR DECAFLUOROTRIPHENYLPHOSPHINE (DFTPP)

Mass	Ion abundance criteria[a]
51	30 to 60
68	<2% of mass 69
70	<2% of mass 69
127	40 to 60
197	<1
198	100 (base peak)
199	5 to 9
275	10 to 30
365	>1
441	Present, but less than mass 443
442	>40
443	17% to 23% of mass 442

[a]All values in percent abundance relative to mass 198, unless otherwise stated.

sample at approximately the same ratio as is present in the standard and that those ions coelute. For those POHCs which may be analyzed with MS detection, Appendix C lists the characteristic ions for use with either electron or chemical ionization.

A key factor in the use of computerized mass spectral search systems is the data base. Ideally, the data base would include spectra of all of the potential compounds of interest and would have been obtained under the same conditions for the GC and the MS as for the incinerator process samples. As a practical alternative, the NBS data base will be used and supplemented with spectra for those POHC compounds which are not in the library, preferably obtained on the instrument to be used for the sample analysis.

A second key factor in the use of computerized mass spectral search systems is the assessment of the confidence to be placed in a qualitative compound identification or "match" with the reference spectrum in the library. The computerized search system typically generates one or more numerical indicators of the "goodness of fit." In the Finnigan INCOS data system, for example, goodness of fit is indicated by three values:

- the fit - how well each library entry is represented in the sample spectrum;
- the reverse fit - how well the sample spectrum is represented in each library entry; and
- the purity - how well both the fit and the reverse fit match the sample spectrum and the library entry.

Of these terms, the purity is the most powerful since a high purity value indicates that both the library entry and the sample spectrum match each other closely and either spectrum accounts for virtually all of the other spectrum. When using a Finnigan INCOS GC/MS/DS, it would be appropriate to base qualitative compound identifications of POHCs on the purity value. For purity values in excess of 900 on the 0 to 1,000 scale, the computer search could be regarded as having identified a single component in the GC peak. A list of the top 5 to 9 choices can also be retrieved as output from the search system. If several compounds are identified with purity values that are close to one another, the

analyst should retrieve and examine the library spectra and use the elution order data to ascertain the best candidate for the identity of the GC peak of interest. Similarly, if the purity value has decreased below the 900 value threshold, the analyst should retrieve and examine the library spectra, the sample spectrum, and any retention time data to identify the sampling compound.

The algorithms for calculating "goodness of fit" parameters and the numerical values that are associated with specific levels of confidence in the identification will vary depending on the particular software in the GC/MS system employed for analysis. For this reason, and also because the professional judgment of the mass spectrometrist is an essential element in the qualitative compound identification process, it is not appropriate to specify in this document numerical goodness of fit criteria to be applied to all POHC analyses.

It is essential, however, that all compound identifications be reported with an indication of the goodness of fit criteria that were used in making the assignment. These may include numerical values of parameters from the computerized search system and/or the analyst's professional judgment (e.g., "strong", "probable", "tentative"). Of course, elution order retention time and accordance with the reference spectrum must be utilized to assure correct identification of any and all POHCs in samples from the emissions of hazardous waste incinerators.

4.4.2.2 Quantitation. Prior to analysis, each sample is spiked with a known amount of the internal standard. The response ratio (or factor) of the internal standard (phenanthrene-d_{10}) to the compounds of interest in the sample is then compared to a similar ratio established utilizing an instrument calibration.

The response factor calibration for the individual compounds is established by using a five-point calibration curve with nominal compound levels of 10, 25, 100, 250, and 500 µg/mL. This calibration is established using the compounds of interest at concentrations that will bracket the working range of the anticipated sample concentrations. Sample concentrations can be modified either up or down to fit this range. The quantitation standard will be spiked into the samples so the concentration will fall within the calibration curve.

Calibration methods, using either the raw response of a standard or the relative response of the analyte versus an internal standard as a function of the amount of analyte, are widely used in analytical chemistry for quantification. For these methods, a series of calibration standards is prepared from reagent material of the compound(s) of interest which span the linear working range. Each of these standards is analyzed using the same conditions as would be used for the actual samples. The response-concentration data pairs are combined into a calibration curve by regression or other methods. The level of the compound in the sample is determined by interpolation within the calibration curve. This method is routinely used for GC/MS.

Direct quantification procedures are recommended for any species which are identified in the hazardous waste incinerator samples. However, direct quantification may not be possible due to a shortage of reference standards, etc., and indirect methods may be necessary in some cases. The most common of the indirect methods is to use the response characteristics of a chemically similar compound to estimate the level of the target constituent of interest. Thus, if for example, benzofluoranthenes were unexpectedly found in a sample but no standard were available, then the level of benzofluoranthenes present in the sample might be estimated from the response curve of benzo(a)pyrene, benzo(e)pyrene, or perylene. Chemical similarity includes similar functionalities, isomeric structures, and homologous series of compounds. The quantitative estimates by this method will be of increasing accuracy as the chemical structure of the reference compound approaches that of the compound of interest. Details of the calibration procedure and calculations are given in Section 5.4 and 6, respectively.

5. Calibration

5.1 Probe Nozzle. Probe nozzles shall be calibrated before their initial use in the field. Using a micrometer, measure the inside diameter of the nozzle to the nearest 0.025 mm. (0.001 in.). Measure the diameter of the nozzle face opening in 3 separate places (i.e. across 3 different diameters) and obtain the average of the measurements. The difference between the high and low numbers shall not exceed 0.1 mm. (0.004 in.).

When nozzles become nicked, dented, or corroded, they shall be reshaped, sharpened, and recalibrated before use. Each nozzle shall be permanently and uniquely identified.

5.2 Pitot Tube/Probe Assembly. The Type S pitot tube probe assembly shall be calibrated according to the procedure outlined in Section 4 of EPA Method 2,[2] or assigned a nominal coefficient of 0.84 if it is not visibly nicked, dented or corroded, and meets design and intercomponent spacing specifications.

5.3 Metering System. Before its initial use in the field, the metering system shall be calibrated according to the procedure outlined in Rom.[6] It is recommended that a leak-check be conducted before calibrating the metering system. For metering systems having diaphragm pumps, the normal leak-check procedure will not detect leakages within the pump. In these cases the following leak-check procedure is suggested: Make a 10-minute calibration run at 0.00057 m^3/min (0.02 cfm); at the end of the run, take the difference of the measured wet test meter and dry gas meter volumes; divide the difference by 10 to get the leak rate. The leak rate should not exceed 0.00057 m^3/min (0.02 cfm). Alternatively, the following procedure is suggested (see Figure 5-1): Close the main valve on the meter box. Insert a one-hole rubber stopper with rubber tubing attached into the orifice exhaust pipe. Disconnect and vent the low side of the orifice manometer. Close off the low side orifice tap. Pressurize the system to 13 to 18 cm (5 to 7 in) of water by blowing into the rubber tubing. Pinch off the tubing and observe the manometer for one minute. A loss of pressure on the manometer indicates a leak in the meter box; leaks, if present, must be corrected.

After each field use, the calibration of the metering system shall be checked by performing three calibration runs at a single intermediate orifice setting (based on the previous field test). The vacuum shall be set at the maximum value reached during the test series. To adjust the vacuum, insert a valve between the wet test meter and the inlet of the metering system. Calculate the average value of the calibration factor. If the calibration has changed by more than 5 percent, recalibrate the meter over the full range of orifice settings, as outlined in Rom.[6]

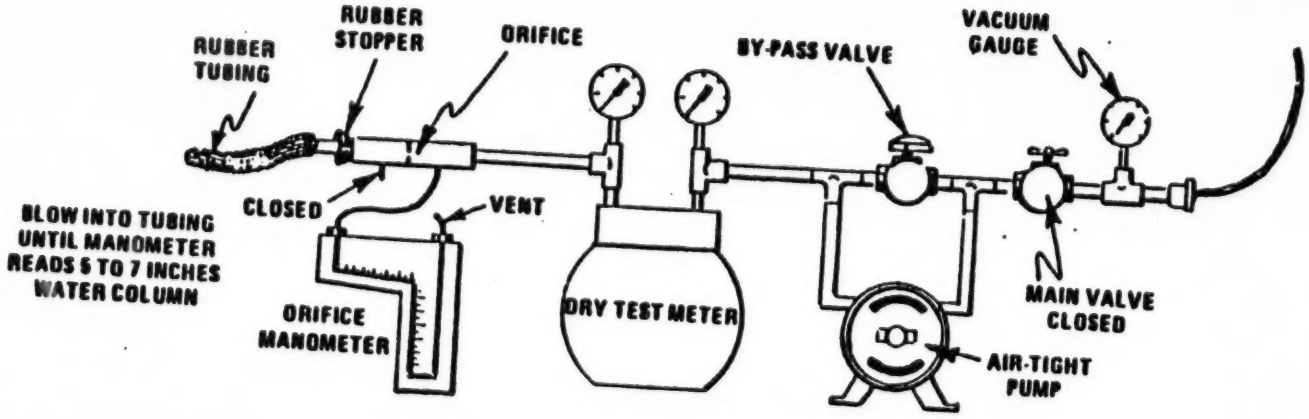

Figure 5-1. Meter box leak-check apparatus.

Note: If the dry gas meter coefficient values obtained before and after a test series differ by more than 5 percent, calculations for the test series shall be performed using whichever meter coefficient value (i.e., before or after) gives the lower value of total sample volume.

5.4 Probe Heater. The probe heating system shall be calibrated before its initial use in the field according to the procedure outlined in Rom.[6] Probes constructed according to Martin[5] need not be calibrated if the calibration curves in Rom[6] are used.

5.5 Temperature Gauges. Each thermocouple must be permanently and uniquely marked on the casing; all mercury-in-glass reference thermometers must conform to ASTM E-1 #63C or 63F specifications. Thermocouples should be calibrated in the laboratory with and without the use of extension leads. If extension leads are used in the field, the thermocouple reading at ambient air temperatures, with and without the extension lead, must be noted and recorded. Correction is necessary if the use of an extension lead produces a change greater than 1.5 percent.

5.5.1 Impinger, Organic Module and Dry Gas Meter Thermocouples. For the thermocouples used to measure the temperature of the gas leaving the impinger train and the XAD-2® resin bed, a three-point calibration at ice water, room air and boiling water temperatures is necessary. Accept the thermocouples only if the readings at all three temperatures agree to ±2°C (3.6°F) with those of the absolute value of the reference thermometer.

5.5.2 Probe and Stack Thermocouple. For the thermocouples used to indicate the probe and stack temperatures, a three-point calibration at ice water, boiling water and hot oil bath temperatures must be performed; it is recommended that room air temperature be added as a thermometer and the thermocouple agree to within 1.5 percent at each of the calibration points. A calibration curve (equation) may be constructed (calculated), and the data extrapolated to cover the entire temperature range suggested by the manufacturer.

5.6 Aneroid Barometer. Adjust the barometer initially and before each test series to agree to within ±2.5 mm Hg (0.1 in Hg) of the mercury barometer, or the corrected barometric pressure value reported by a nearby National Weather Service station. (Same altitude above sea level.)

5.7 Triple-Beam Balance. Calibrate the triple beam balance before each test series using Class-S standard weights; the weights must be within ±0.5 percent of the standards, or the balance adjusted to meet these limits.

5.8 GC/MS. Calibration standards are prepared fresh weekly and run daily. The results are compared to previous runs of the standard (see Section 7, Quality Control for details).

A stock standard is prepared by accurately transferring a known amount of pure compound(s) to a volumetric flask and diluting with methanol. Liquid standards are measured using microliter syringes while solids are conveniently weighed on an analytical balance. The amount (mass) contained in the syringe can be determined by either 1) weighing or 2) utilizing compound density data and the volume. Utilizing the syringe volume method is the most convenient, but care should be excercised to ensure that the most accurate sample is measured. The pure liquid standards should be at room temperature (because most density measurements are made at 20-25°C) and the total syringe volume used should be no less than 10 µL. Care should also be taken not to allow the syringe to warm up (due to body heat) as this will effect the visible measurement of syringe volume. The stock standards should contain all components of interest as well as the compound to be used as the internal standard (see Section 4.4).

Working standards are prepared by diluting aliquots of the stock standard with methanol or other suitable solvent. Again, small volumes are to be avoided, thereby enhancing the accuracy. A calibration curve is developed using a minimum of five standards plus a blank solvent covering a 10-fold range in concentration. This range will be 0 (blank) 0.5X, X, 2X, 5X, and 10X, where X is the minimal detectable amount.

All standards will be stored at sub-ambient temperature and allowed to warm to room temperature before use. Example calculations are given in Section 6.

6. Calculations

6.1 Nomenclature.

A_n = Cross sectional area of nozzle, m^2 (ft^2).

B_{ws} = Water vapor in the gas stream, proportion by volume.

C_d = Type S pitot tube coefficient (nominally 0.84 ± 0.02), dimensionless.

I = Percent of isokinetic sampling.

L_a = Maximum acceptable leakage rate for either a pretest leak check or for a leak check following a component change; equal to 0.00057 m^3/min (0.02 cfm) or 4 percent of the average sampling rate, whichever is less.

L_i = Individual leakage rate observed during the leak check conducted prior to the i^{th} component change (i=1, 2, 3.....n) m^3/min (cfm).

L_p = Leakage rate observed during the post-test leak check, m^3/min (cfm).

M_d = Stack gas dry molecular weight, g/g-mole (lb/lb-mole).

M_w = Molecular weight of water, 18.0 g/g-mole (18.0 lbs/lb-mole).

P_{bar} = Barometric pressure at the sampling site, mm Hg (in Hg).

P_s = Absolute stack gas pressure, mm Hg (in Hg).

P_{std} = Standard absolute pressure, 760 mm Hg (21.85 in Hg).

R = Ideal gas constant, 0.06236 mm Hg-m^3/°K-g-mole, (21.85 in Hg-ft^3/°R-lb-mole).

T_m = Absolute average dry gas meter temperature, °K (°R).

T_s = Absolute average stack gas temperature, °K (°R).

T_{std} = Standard absolute temperature, 293°K (528°R).

V_{lc} = Total volume of liquid collected in the organic module condensate knockout trap, the impingers and silica gel, mL.

V_m = Volume of gas sample as measured by dry gas meter, m^3 (ft^3).

$V_{m(std)}$ = Volume of gas sample measured by the dry gas meter, corrected to standard conditions, dscm (dscf).

$V_{w(std)}$ = Volume of water vapor in the gas sample, corrected to standard conditions, scm (scf).

v_s = Stack gas velocity, calculated by EPA Method 2,[2] Equation 2-9, using particulate field data, m/sec (ft/sec).

Y = Dry gas meter calibration factor, dimensionless.

ΔH = Average pressure differential across the orifice meter, mm H_2O (in. H_2O).

ρ_w = Density of water, 0.9982 g/mL (0.002201 lb/mL).

θ = Total sampling time, min.

θ_1 = Sampling time interval, from the beginning of a run until the first component change, min.

θ_i = Sampling time interval between two successive component changes beginning with the interval between the first and second changes, min.

θ_p = Sampling time interval from the final (n^{th}) component change until the end of the sampling run, min.

13.6 = Conversion to mm Hg (in Hg) from mm H_2O (in H_2O).

60 = Sec/min.

6.2 Dry Gas Volume at Standard Conditions. Correct the sample volume measured by the dry gas meter to standard conditions (20°C, 760 mm Hg or 68°F, 29.92 in Hg) by using the equation:

$$V_{m(std)} = V_m Y \frac{T_{std}}{T_m} \times \frac{P_{bar} + \frac{\Delta H}{13.6}}{P_{std}}$$

$$= K_1 V_m Y \frac{P_{bar} + (\Delta H/13.6)}{T_m}$$

where:

K_1 = 0.3858 °K/mm Hg for metric units.

= 17.64 °R/in Hg for English units.

Note: This equation can be used as written unless the leakage rate observed during any of the leak checks (i.e., the post-test leak check or leak checks conducted prior to component changes) exceeds L_a. If L_p or L_i exceeds L_a, the above equation must be modified as follows:

(a) Case I. No component changes made during sampling run. In this case, replace V_m with the expression:

$$[V_m - \Theta (L_p - L_a)]$$

(b) Case II. One or more component changes made during the sampling run. In this case, replace V_m by the expression:

$$[V_m - \Theta_1 (L_1 - L_a)] - \sum_{i=2}^{n} [\Theta_i (L_i - L_a) - \Theta_p (L_p - L_a)]$$

and substitute only those leakage rates (L_i or L_p) which exceed L_a.

6.3 Moisture Content.

6.3.1 Volume of Water Vapor.

$$V_{w(std)} = V_{lc} \frac{P_w}{M_w} \frac{RT_{std}}{P_{std}} = K_2 V_{lc}$$

where:

$K_2 = 0.001333$ m³/mL for metric units.

$= 0.04707$ ft³/mL for English units.

6.4 Isokinetic Variation.

6.4.1 Calculation from Unreduced Data.

$$I = \frac{100 T_s [K_3 F_{lc} + (V_m/T_m) (P_{bar} + \Delta H/13.6)]}{60\Theta V_s P_s A_n}$$

where:

$K_3 = 0.003454$ mm Hg-m³/mL-°K for metric units.

$= 0.002669$ in Hg-ft³/mL-°R for English units.

6.4.2 Calculation from Intermediate Values.

$$I = \frac{T_s V_{m(std)} P_{std} 100}{T_{std} v_s \Theta A_n P_s 60(1-B_{ws})}$$

$$= \frac{T_s V_{m(std)}}{P_s v_s A_n \Theta (1-B_{ws})}$$

where:

K_4 = 4.320 for metric units.
= 0.09450 for English units.

6.4.3 Acceptable Results. If 90 percent $\leq I \leq 110$ percent, the results are acceptable.

6.5 Concentration of Any Given POHC Per Sample. An average relative response factor (RRF) for a given internal standard is calculated in the following way.

1) Obtain an area count for each compound from injections of each of the five levels of calibration standards. Each standard contains a known amount of the POHC's of interest plus a known amount of the quantitation standard. The area for each compound is based on a preselected ion (usually the major ion). For the quantitation standard, d_{10}-phenanthrene, the major ion is 188.

2) Calculate a relative response factor in triplicate for each compound at each concentration level using the equation below.

$$RRF = \frac{A_s C_{is}}{A_{is} C_s}$$

where:

A_s = Area of the characteristic ion for the POHC to be measured.
A_{is} = Area of the characteristic ion for the internal standard.
C_{is} = Concentration of the internal standard (µg/mL).
C_s = Concentration of the POHC (µg/mL) to be measured.

3) Average the average RRF's for each compound from each level calculating a grand average RRF for each compound. If RRF mean exhibits a % CV >0, a linear regression may be used.

The concentration of any give POHC is calculated using the equation given below:

$$\frac{C_{is}}{A_{is}\ (\text{major ion})} \times \frac{A_{unk\ (\text{major ion})}}{RRF} = C_{unk} (\mu g/mL)$$

where:

A_{unk} = Area of the major ion for the POHC of interest.

A_{is} = Area of the major ion for the internal standard.

C_{is} = Concentration of the internal standard spiked into the sample (µg/mL).

C_{unk} = Concentration of the unknown (µg/mL).

RRF = Average relative response factor of the POHC of interest.

6.6 Concentration of any Given POHC in the Gaseous Emissions of a Combustion Process.

1) Multiply the concentration of the POHC as determined in Section 6.5 by the final concentration volume, typically 10 mL.

$$C_{unk}\ (\mu g/mL) \times \text{sample volume (mL)} =$$

$$\text{amount (µg) of POHC in sample}$$

2) Sum the amount of POHC found in all samples associated with a single train.

$$\text{Total (µg)} = \text{XAD-2}^{®}\ (\mu g) + \text{condensate (µg)} +$$

$$\text{rinses (µg)} + \text{impinger (µg)}$$

3) Divide the total µg found by the volume of stack gas sampled (m^3).

$$\text{Total µg/train sample volume} =$$

$$\text{concentration of POHC } (\mu g/m^3)$$

6.7 Percent Recovery. Divide the amount of any single surrogate spiked into a sample before sample work-up into the amount of that surrogate found to be in sample after analysis. Then convert to a percent.

$$\frac{\text{Amount of spike found after analysis}}{\text{Amount of spike into a sample}} \times 100 = \%\ \text{recovery.}$$

7. Quality Control.

Table 7-1 presents the major components of the quality control for this method.

7.1 Sampling. See EPA Manual 600/4-77-027b for Method 5 quality control.

7.2 Analysis. The quality assurance program required for this study includes the analysis of field and method blanks, procedure validations, incorporation of stable labeled surrogate compounds, quantitation versus stable labeled internal standards, capillary column performance checks and external performance tests. The surrogate spiking compounds selected for a particular analysis are used as primary indicators of the quality of the analytical data for a wide range of compounds and a variety of sample matrices.

The assessment of combustion data, positive identification and quantitation of the selected compounds are dependent on integrity of the samples received and the precision and accuracy of the analytical methods employed. The quality assurance procedures for this method are designed to monitor the performance of the analytical method and to provide the required information to take corrective action if problems are observed in laboratory operations or in field sampling activities.

7.2.1 Field Blanks. The field blanks must be submitted with the samples collected at each sampling site. The field blanks include the sample bottles containing aliquots of sample recovery solvents, and unused filters and resin cartridges. At a minimum, one complete sampling train will be assembled in the field staging area, taken to the sampling area and leak checked at the beginning and end of the testing (or for the same total number of times as the actual test train). The filter housing and probe of the blank train will be heated during the sample test. The train will be recovered as if it were an actual test sample. No gaseous sample will be passed through the sampling train.

7.2.2 Method Blanks. A method blank must be prepared for each set of analytical operations to evaluate contamination and artifacts that can be derived from glassware, reagents and sample handling in the laboratory.

Table 7-1. QUALITY ASSURANCE PROCEDURES FOR TRACE ORGANIC ANALYSIS

Field blanks	1 - Flue gas sampling train per day 10% - Filter returned unused 10% - Resin cartridges returned unused 1 - Field solvent blanks per lot 3 - Sample containers used
Method blanks	1 - Analytical method blank
Method validations	Method procedures studied and validated with spiked blanks and spiked samples prior to initiating analysis program
Surrogate spiking compounds	Dioxane-d_8, pyridine-d_5, toluene-d_8, chlorobenzene-d_5, phenol-d_5, nitrobenzene-d_5, naphthalene-d_8, and pentachlorophenol-$^{13}C_6$ spiked in all samples prior to extraction to provide recovery and precision data. In addition where available labeled analogs of the POHC of interest should be spiked.
Column performance mixture	Grob test mixture to evaluate and identify capillary column characteristics.
Internal standards for quantitation	Phenanthrene-d_{10}
Performance tests	Interlaboratory testing/split samples and/or performance audit samples

7.2.3 Method Performance Evaluation. Evaluation of analytical procedures for a selected series of compounds must include the sample preparation procedures, and each associated analytical determination. The analytical procedures should be challenged by the test compounds spiked at appropriate levels and carried through the procedures.

7.2.4 Capillary Column Performance Tests. Capillary columns will be evaluated and characterized utilizing Grob type mixtures. The columns will be evaluated on installation and at least once per week thereafter. In addition if column performance deteriorates, steps must be taken to improve the performance or the column must be replaced.

7.2.5 Surrogate Spiking Compounds. The number of samples required to establish the precision and accuracy of a method can be significantly reduced by utilizing surrogate compounds as performance indicators. By utilizing stable isotope-labeled compounds, method performance can be monitored on a routine basis without the cost of additional spiked analyses. Stable isotope-labeled compounds that have the same physical and chemical characteristics as the analyte and that are not present in the samples are ideal choices for determining method performance.

The recoveries of the stable isotope labeled surrogate compounds are used as the primary measurement of method analysis precision. In addition, the spiking of surrogate standards in all sample field blanks, method blanks and actual samples prior to extractions can be used to determine whether any sample matrix effects or other analytical problems affect the accuracy of the analyses.

7.3 Quantitative Analysis. Quantitative analytical methods are used to estimate the level of hazardous compounds in various matrices. The process of estimation or quantitation requires the precision, accuracy (bias), and detection limit of the analytical method to be known and documented.

7.3.1 Calibration.

1) Initial calibration standards are to be prepared and analyzed in the concentration series 0 (blank), 0.5X, X, 2X, 5X, and 10X where X is the concentration in the solvent being analyzed corresponding to the required or desired detection limit in the original matrix.

2) Daily Calibration. An instrument calibration standard will be run prior to analyses each day to establish that the sensitivity of the instrument has not changed over the working range. Data generated will be compared against the cumulative data to date to establish the stability of the instrument response.

3) Quality control samples are to be inserted at random in a sample analysis series. At least one control sample is to be included with each lot of samples. The types of control samples are chosen to minimize the number of control samples and maximize the quality control data obtained from the analytical system. For example, a spike of a previously analyzed combustion sample or blank XAD-2® extract containing no detectable analyte may exhibit matrix effects that will not be demonstrated by a spike in a standard solvent.

4) Data generated from daily control samples are to be used to update control charts and, by addition to the existing data base, to refine the detection limit of the analytical method as well as the estimates of precision and accuracy.

5) Concentration values less than the average detection limit of the method will be reported as "less than" the detection limit unless sufficient data exist to justify a lower detection limit. Conversely, detection limits higher than the average detection limit (as is the case of a sample with high background interferences) will be reported as "less than" the higher detection limit.

7.4 Optimization of the GC/FID and GC/MS Procedures. GC operating conditions will be optimized by analyzing solutions containing a variety of the candidate POHCs by the GC/FID technique. The column head pressure is adjusted appropriately to maximize the FID response to the test mixtures. These adjustments are used to select the optimum carrier gas velocity.

Having established GC operating conditions by the GC/FID procedure, the method is then applied to the determination of the candidate POHCs by GC/MS. The mass spectrometer is operated in full scan (40 to 450 amu)

in the EI mode. The scan time is maintained at ≦1 s to enable the collection of enough scans to characterize each capillary GC peak.

7.5 GC Quality Control Procedures. The GC/FID and GC/MS procedure will include calibration utilizing standard solutions of the candidate POHCs. Five-point calibration curves are prepared for each candidate POHC determined by gas chromatography. Each response of the FID and/or MS response (relative to phenanthrene-d_{10}) as a function of the quantity of the particular POHC injected on the GC column will be plotted.

In addition to the use of standards for the calibration, the performance of the GC/MS system is checked daily with decafluorotriphenylphosphine (DFTPP) according to the requirements given in EPA Method No. 625. The performance criteria listed in Table 4-2 will be met.

The precision of determinations by GC/FID and GC/MS is assessed by triplicate injections of at least one standard solution of each POHC investigated by gas chromatography. The estimate of precision of the replicate measurements is expressed as the relative standard deviation (RSD) calculated from Equation 1

$$RSD\ (\%) = \frac{SD}{\bar{X}}\ 100 \qquad (1)$$

Standard Deviation (SD) is calculated from Equation 2

$$SD = \left[\frac{\sum_{i=1}^{n} (X_i - \bar{X})^2}{(n-1)}\right]^{1/2} \qquad (2)$$

Mean relative response ($\bar{X}$) is calculated from Equation 3

$$\bar{X} = \frac{1}{n} \sum_{i=1}^{n} X_i \qquad (3)$$

where:

n = Number of replicate measurements.

X_i = Relative response of the POHC standard.

Phenanthrene-d_{10} will be used as an internal standard in all GC methods. Along with the analytes phenanthrene-d_{10} will be injected to minimize the effect of injection volume and instrument performance upon the precision of determinations. Also, the phenanthrene-d_{10} internal standard is used to calculate the relative response factor (RRF) for each POHC from Equation 4.

$$RRF = (A_s C_{is})/(A_{is} C_s) \qquad (4)$$

where:

A_s = Area of the characteristic ion for the POHC to be measured.
A_{is} = Area of the characteristic ion for the internal standard.
C_{is} = Concentration of the internal standard (µg/mL).
C_s = Concentration of the POHC (µg/mL) to be measured.

7.6 Statistical Analysis of Data.

7.6.1 Found Concentration.

1) Instrument calibration standards to cover the range of anticipated concentrations are prepared. These calibration standards are introduced to the instrument to obtain responses for the various concentrations.

2) An instrument calibration curve is constructed by plotting the response versus the calibration standard concentration and determining the best fit regression curve for the data. A measure of the linearity of the responses is the correlation coefficient. The mean of the values obtained will be used instead of a regression if the values agree within 10 percent.

3) The found concentration from the analysis of a sample is obtained by entering the instrument calibration curve with the sample response and reading the corresponding concentration. The concentration read from the calibration curve must be modified to reflect the concentration in the original matrix assuming 100 percent recovery through the analytical method. The resultant concentration is the found concentration.

7.6.2 Detection Limit.

1) Before any analytical system is employed in a determination, sufficient spikes and blanks will be run to statistically establish the lowest concentration which may be distinguished from zero. The lowest calculated concentration will be reported as the detection limit of the method provided that at least one of the spike (target) concentrations is below the calculated detection limit. Otherwise, the lowest spike concentration is the minimum level that can be reported as the detection limit. The highest spike concentration will represent the upper limit of reportable data.

2) The detection limit is derived from the assumption that the relationship between the found concentration and target concentration is linear, and that the variance about the least squares linear regression line is homogeneous over the tested concentration range, and that the distribution of found concentrations for a given target concentration is a normal distribution.

Based on these assumptions, the least squares linear regression line of the form, $y = y_o + bx$, is determined, where:

y_o = y axis (found concentration) intercept.

b = Slope of the line.

x = Target concentration.

A measure of the linearity of the data is the correlation coefficient. The confidence limits about the regression line are given by:

$$y = yo + bx + s\, t_{(n-2),\,(1-\alpha/2)} \left(\frac{1}{n} + \frac{(x-\bar{x})^2}{\Sigma(x_i-\bar{x})^2} \right)^{\frac{1}{2}}$$

for the upper confidence limit and

$$y = yo + bx - s\, t_{(n-2),\,(1-\alpha/2)} \left(\frac{1}{n} + \frac{(x-\bar{x})^2}{\Sigma(x_i-\bar{x})^2} \right)^{\frac{1}{2}}$$

for the lower confidence limit, where:

$$s = [[\Sigma y^2 i - a\Sigma yi - b\Sigma xiyi]/(n-2)]^{\frac{1}{2}}$$

where:

$t_{(n-2),\ (1-\alpha/2)}$ = Student's t for (n-2) degrees of freedom and a level of significance of α, and

n = total number of data points.

The detection limit, x_d, is the value of x corresponding to a point on the lower confidence limit curve where the value of y equals the value of y on the upper confidence limit curve at x = 0.

7.6.3 Documentation Surrogate (Target) Recoveries. Each sample fraction that is analyzed will be spiked with the following surrogate (see Table 7-2) compounds at 10X where X is the minimum detectable level for the individual compound. In addition where readily available stable labeled analogs of the POHC's being incinerated should be spiked in the indirect fractions at levels based on the following: (1) target detection limits for the selected POHC's and (2) expected concentrations of the organic waste components. For example, incineration effluent samples would require spiking levels of labeled compounds at 2 to 10 times the detection limit required to measure 99.99% DRE of the POHCs.

Data generated will be compiled in Table 7-2 and treated as shown in Table 7-3. Surrogate recovery will be for the total sample, i.e., the average found value for all fractions of a sampling train, and treated for each individual fraction.

Table 7-2. SURROGATE DATA

Surrogate(s)	Target concentration 10X, where X equal MDL	Organic rinse(s) 1	Condensate 2	Impingers 3	XAD_2/ filter 4
Dioxane-d_8	250 µg[a]				
Pyridine-d_5	250 µg				
Toluene-d_8	250 µg				
Chlorobenzene-d_5	250 µg				
Phenol-d_5	250 µg				
Nitrobenzene-d_5	250 µg				
Naphthalene-d_8	250 µg				
Pentachloro-phenol-$^{13}C_6$	250 µg				

[a]Total µg based on an assumed MDL of 25 ng on-column;

10 mL concentrate = 25 ng/µL on-column

1 mL concentrate = 250 ng/µL on-column

Table 7-3. SURROGATE RECOVERIES

Surrogate(s)	Target concentration (µg)	Average found value	Standard deviation	Percent imprecision	Percent inaccuracy
Dioxane-d_8	250				
Pyridine-d_5	250				
Toluene-d_8	250				
Chlorobenzene-d_5	250				
Phenol-d_5	250				
Nitrobenzene-d_5	250				
Naphthalene-d_8	250				
Pentachloro-phenol-$^{13}C_6$	250				

$$\text{Percent relative standard deviation} = \frac{S}{\bar{X}} \times 100$$

where:

S = Standard deviation.

$\bar{X}$ = Average found concentraton.

$$\text{Percent recovery} = \frac{\bar{X}}{TC} \times 100$$

where:

$\bar{X}$ = Average found concentration of the TC.

TC = Target concentration.

8. References

1. Addendum to Specifications for Incinerator Testing at Federal Facilities. PHS, NCAPC, December 6, 1967.

2. Code of Federal Regulations. Title 40, Part 60, Appendix A, Methods 1-5.

3. Felix, L.G., G.I. Clinard, G.E. Lacey and J.D. McCain. Inertial Cascade Impactor Substrate Media for Flue Gas Sampling. Research Triangle Park, NC. Environmental Protection Agency, June 1977. PB-276 583/2BE, 83pp.

4. Gaseous Fuels: Coal and Coke - Atmospheric Analysis. Annual Book of ASTM Standards, Part 26, 1974, pp. 617-622.

5. Martin, R.M. Construction Details of Isokinetic Source - Sampling Equipment. Research Triangle Park, NC, Environmental Protection Agency, April, 1971. PB-203 060/BE, APTD-0581. 35 pp.

6. Rom, J.J. Maintenance, Calibration and Operation of Isokinetic Source-Sampling Equipment. Research Triangle Park, NC. Environmental Protection Agency, March 1972. PB-209 022/BE, APTD-0576. 39 pp.

7. Vollaro, R.F. A Survey of Commerically Available Instrumentation for the Measurement of Low-Range Gas Velocities. Research Triangle Park, NC. Environmental Protection Agency, Emissions Measurement Branch, November 1976 (unpublished paper).

APPENDIX A-1
CLEANING OF GLASSWARE

In the analysis of samples containing components in the parts per billion range, the preparation of scrupulously clean glassware is mandatory. Failure to do so can lead to a myriad of problems in the interpretation of the final chromatograms due to the presence of extraneous peaks resulting from contamination. Particular care must be taken with glassware such as Soxhlet extractors, Kuderna-Danish evaporative concentrators, sampling train components, or any other glassware coming in contact with an extract that will be evaporated to a lesser volume. The process of concentrating the compounds of interest in this operation may similarly concentrate the contamination substance, resulting in extraneous chromatographic peaks that, in extreme cases, may completely overlap and mask peaks of interest.

Although chemists do not all agree on procedural details in the cleaning of glassware, the majority are in agreement regarding the basic cleaning steps. These are:

1. removal of surface residuals immediately after use;
2. hot soak to loosen and flotate most particulate material;
3. hot water rinse to flush away flotated particulate;
4. soak with oxidizing agent to destroy traces of organic compounds;
5. hot water rinse to flush away materials loosened by deep penetrant soak;
6. distilled water rinse to remove metallic deposits from the tap water; and
7. methanol rinse to flush off any final traces of organic materials and remove the water.

Each of these eight fundamental steps will be discussed in the order in which they appear above.

1. As soon as possible after use of glassware coming in contact with sample, i.e., beakers, pipets, flasks, or bottles used for standards, the glassware should be methanol-flushed before placing in the hot detergent soak. If this is not done, the soak bath may serve to contaminate all other glassware placed therein.

2. The hot soak consists of a bath of a suitable detergent in water of 50°C or higher. The detergent, powder or liquid, should be entirely synthetic and not a fatty acid base. There are very few areas of the country where the water hardness is sufficiently low to avoid the formation of some hard water scum resulting from the reaction between calcium and magnesium salts with a fatty acid soap. This hard water scum or curd would have an affinity particularly for many chlorinated compounds and, being almost wholly water insoluble, would deposit on all glassware in the bath in a thin film.

   There are many suitable detergents on the wholesale and retail market. Most of the common liquid dishwashing detergents sold at retail are satisfactory but are more expensive than other comparable products sold industrially. Alconox, in powder or tablet form, is manufactured by Alconox, Inc., New York and is marketed by a number of laboratory supply firms. Sparkleen, another powdered product, is distributed by Fisher Scientific Company.

3. No comments required.

4. The most common and highly effective oxidizing agent for removal of traces of organic compounds is the traditional chromic acid solution made up of H_2SO_4 and potassium or sodium dichromate. For maximum efficiency, the soak solution should be hot (40 to 50°C). Safety precautions must be rigidly observed in the handling of this solution. Prescribed safety gear should include safety goggles, rubber gloves, and apron. The bench area where this operation is conducted should be covered with lead sheeting as spattering will disintegrate the unprotected bench surface.

   The potential hazards of using chromic sulfuric acid mixture are great and have been well publicized. There are now commercially available substitutes that possess the advantage of safety in handling. These are biodegradable concentrates with a claimed cleaning strength equal to the chromic acid solution. They are alkaline, equivalent to ca 0.1 N NaOH upon dilution, and are claimed to remove dried blood, silicone greases, distillation residues, insoluble organic residues, etc. They are further claimed to remove radioactive traces and will not attack glass nor exert a corrosive effect on skin

or clothing. One such product is "Chem Solv 2157", manufactured by Mallinckrodt and available through laboratory supply firms. Another comparable product is "Detex", a product of Borer-Chemie, Solothurn, Switzerland.

5, 6, and 7. No comments required.

8. There is always a possibility that between the time of washing and the next use, the glassware may pick up some contamination from either the air or direct contact. To ensure against this, it is good practice to flush the item immediately before use with some of the same solvent that will be used in the analysis.

The drying and storage of the cleaned glassware is of critical importance to prevent the beneficial effects of the scrupulous cleaning from being nullified. Pegboard drying is not recommended as contaminants may be introduced to the interior of the cleaned vessels. Neoprene-coated metal racks are suitable for such items as beakers, flasks, chromatographic tubes, and any glassware then can be inverted and suspended to dry. Small articles like stirring rods, glass stoppers, and bottle caps can be wrapped in aluminum foil and oven-dried a short time if oven space is available. Under no circumstance should such small items be left in the open without protective covering. The dust cloud raised by the daily sweeping of the laboratory floor can most effectively recontaminate the clean glassware.

As an option, the glassware can be heated to a minimum of 300°C to vaporize any organics.

APPENDIX A-2

PREPARATION OF XAD-2® SORBENT RESIN

1. SCOPE AND APPLICATION

XAD-2® resin, as supplied by the manufacturer, is impregnated with a bicarbonate solution to inhibit microbial growth during storage. Both the salt solution and any residual extractable monomer and polymer species must be removed before use. The resin is prepared by a series of water and organic extractions followed by careful drying.

2. EXTRACTION

2.1 Method 1

The procedure may be carried out in a giant Soxhlet extractor. An all-glass thimble containing an extra-coarse frit is used for extraction of XAD-2®. The frit is recessed 10-15 mm above a crenellated ring at the bottom of the thimble to facilitate drainage. The resin must be carefully retained in the extractor cup with a glass wool plug and stainless steel screen since it floats on methylene chloride. This process involves sequential extraction in the following order.

Solvent	Procedure
Water	Initial rinse - place resin in a beaker and rinse once with D.I. water and discard. Fill with water a second time and let stand overnight and discard.
Water	Extract with H_2O for eight hours.
Methyl alcohol	Extract for 22 hours.
Methylene chloride	Extract for 22 hours.
Methylene chloride (fresh)	Extract for 22 hours.

2.2 Method 2

As an alternative to Soxhlet extraction, a continuous extractor has also been fabricated for the extraction sequence and is described in Figure B-1. This extractor has been found to be acceptable. The particular canister used for the apparatus shown in Figure A-2-1 contains about 500 g of finished XAD-2®. Any size may be constructed; the choice is dependent on the needs of the sampling programs. The XAD-2® is held under light spring tension between a pair of coarse and fine screens. Spacers under the bottom screen allow for even distribution of clean solvent. The three-necked flask should be of sufficient size (3 L in this case) to hold solvent equal to twice the dead volume of the XAD-2® canister. Solvent is refluxed through the Snyder column and the distillate continuously cycled up through the XAD-2® for extraction and returned to the flask. The flow is maintained upwards through the XAD-2® for extraction and returned to the flask. The flow is maintained upwards through the XAD-2® to allow maximum solvent contact and prevent channeling. A valve at the bottom of the canister allows removal of solvent from the canister between changes.

Experience has shown that it is very difficult to cycle sufficient water in this mode. Therefore, the aqueous rinse is accomplished by simply flushing the canister with about 20 L of distilled water. A small pump may be useful for pumping the water through the canister. The water extraction should be carried out at the rate of about 20-40 mL/min.

After draining the water, subsequent methyl alcohol and methylene chloride extractions are carried out using the refluxing apparatus. An overnight or 10- to 20-hour period is normally sufficient for each extraction.

All materials of construction are glass, Teflon®, or stainless steel. Pumps, if used, should not contain extractable materials. Pumps are not used with methanol and methylene chloride.

3. DRYING

After evaluation of several methods of removing residual solvent, a fluidized-bed technique has proven to be the fastest and most reliable drying method.

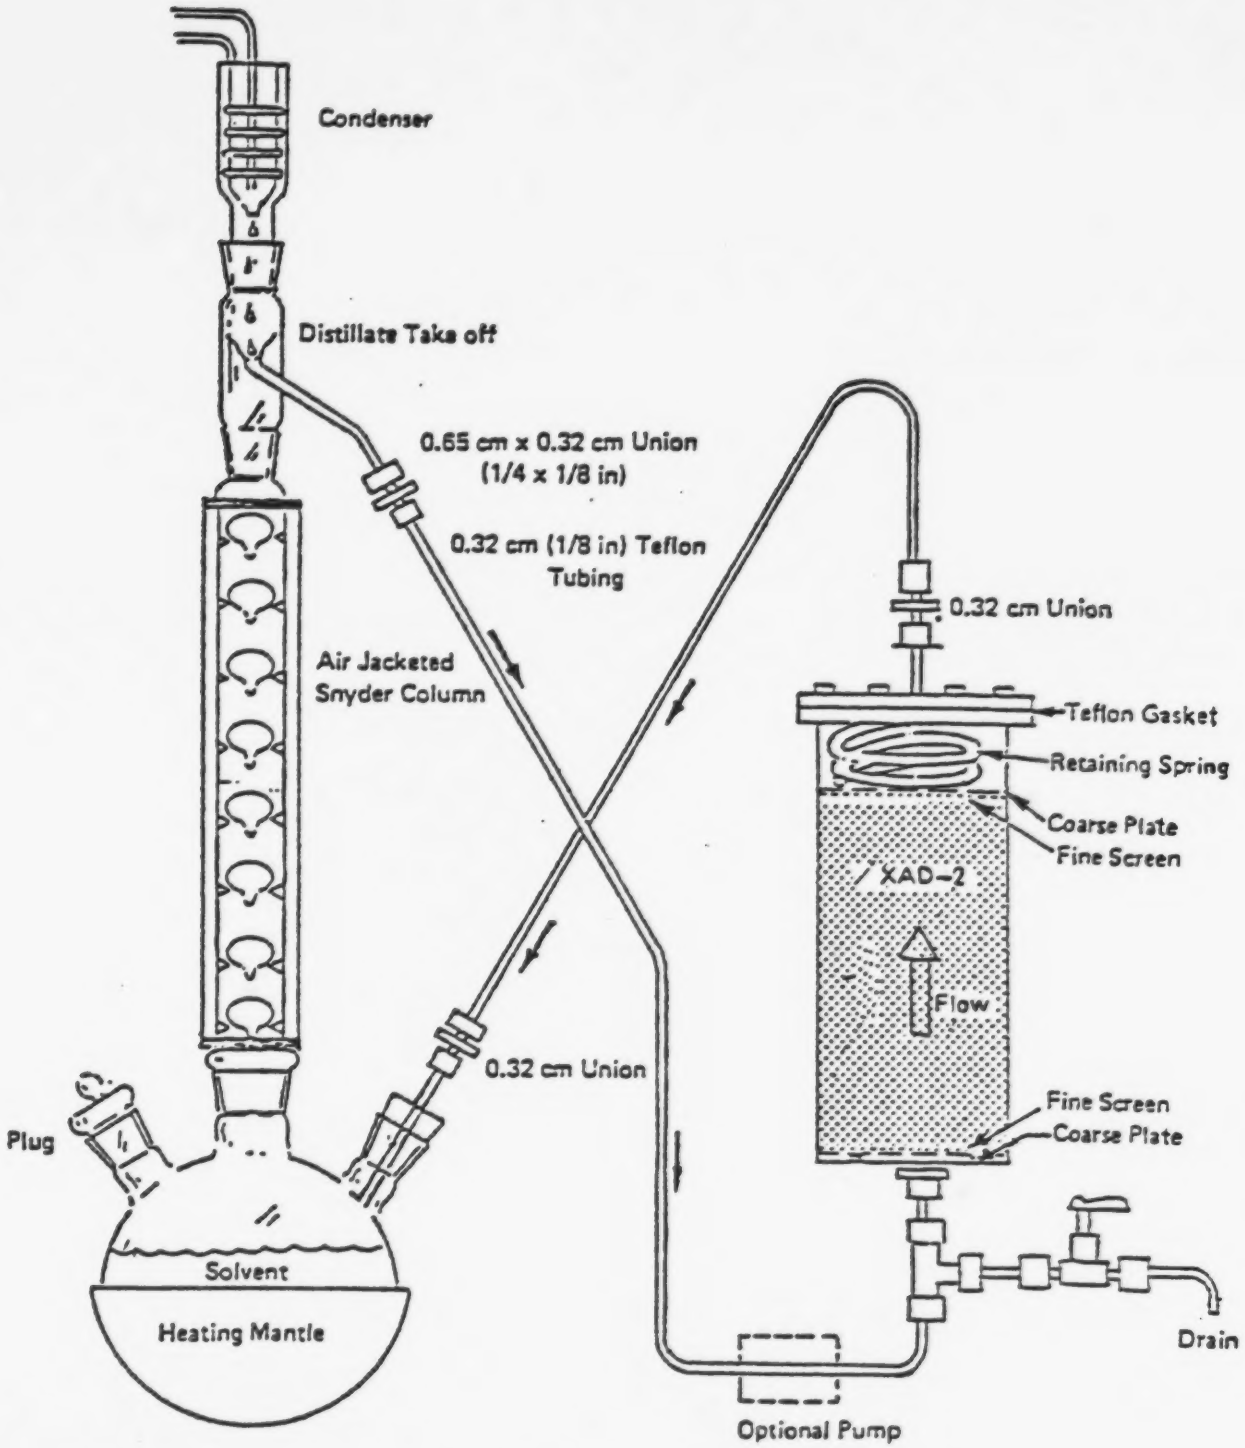

Figure A-2-1. XAD-2® cleanup extraction apparatus.

A simple column with suitable retainers as shown in Figure A-2-2 will serve as a satisfactory column. A 10.2-cm (4-in) Pyrex® pipe 0.6 m (2 ft) long will hold all of the XAD-2® from the extractor shown in Figure B-1 or the Soxhlet extractor, with sufficient space for fluidizing the bed while generating a minimum resin load at the exit of the column.

3.1 Method 1

The gas used to remove the solvent is the key to preserving the cleanliness of the XAD-2®. Liquid nitrogen from a regular commercial liquid nitrogen cylinder has routinely proven to be a reliable source of large volumes of gas free from organic contaminants. The liquid nitrogen cylinder is connected to the column by a length of precleaned 0.95-cm (3/8-in) copper tubing, coiled to pass through a heat source. As nitrogen is bled from the cylinder, it is vaporized in the heat source and passes through the column. A convenient heat source is a water bath heated from a steam line. The final nitrogen temperature should only be warm to the touch and not over 40°C. Experience has shown that about 500 g of XAD-2® may be dried overnight consuming a full 160-L cylinder of liquid nitrogen.

3.2 Method 2

As a second choice, high purity tank nitrogen may be used to dry the XAD-2®. The high purity nitrogen must first be passed through a bed of activated charcoal approximately 150 mL in volume. With either type of drying method, the rate of flow should gently agitate the bed. Excessive fluidization may cause the particles to break up.

4. QUALITY CONTROL PROCEDURES

For both Methods 1 and 2, the quality control results must be reported for the batch. The batch must be re-extracted as discussed in Section 3.2.1 if the residual extractable organics are greater than 20 µg/mL by TCO analysis, or the gravimetric residue is greater than 0.5 mg/20 g XAD-2® extracted.

Four control procedures are used with the final XAD-2® to check for (1) residual methylene chloride, (2) extractable organics (TCO), (3) specific compounds of interest as determined by GC/MS as described in Section 4.4, and (4) residue (GRAV).

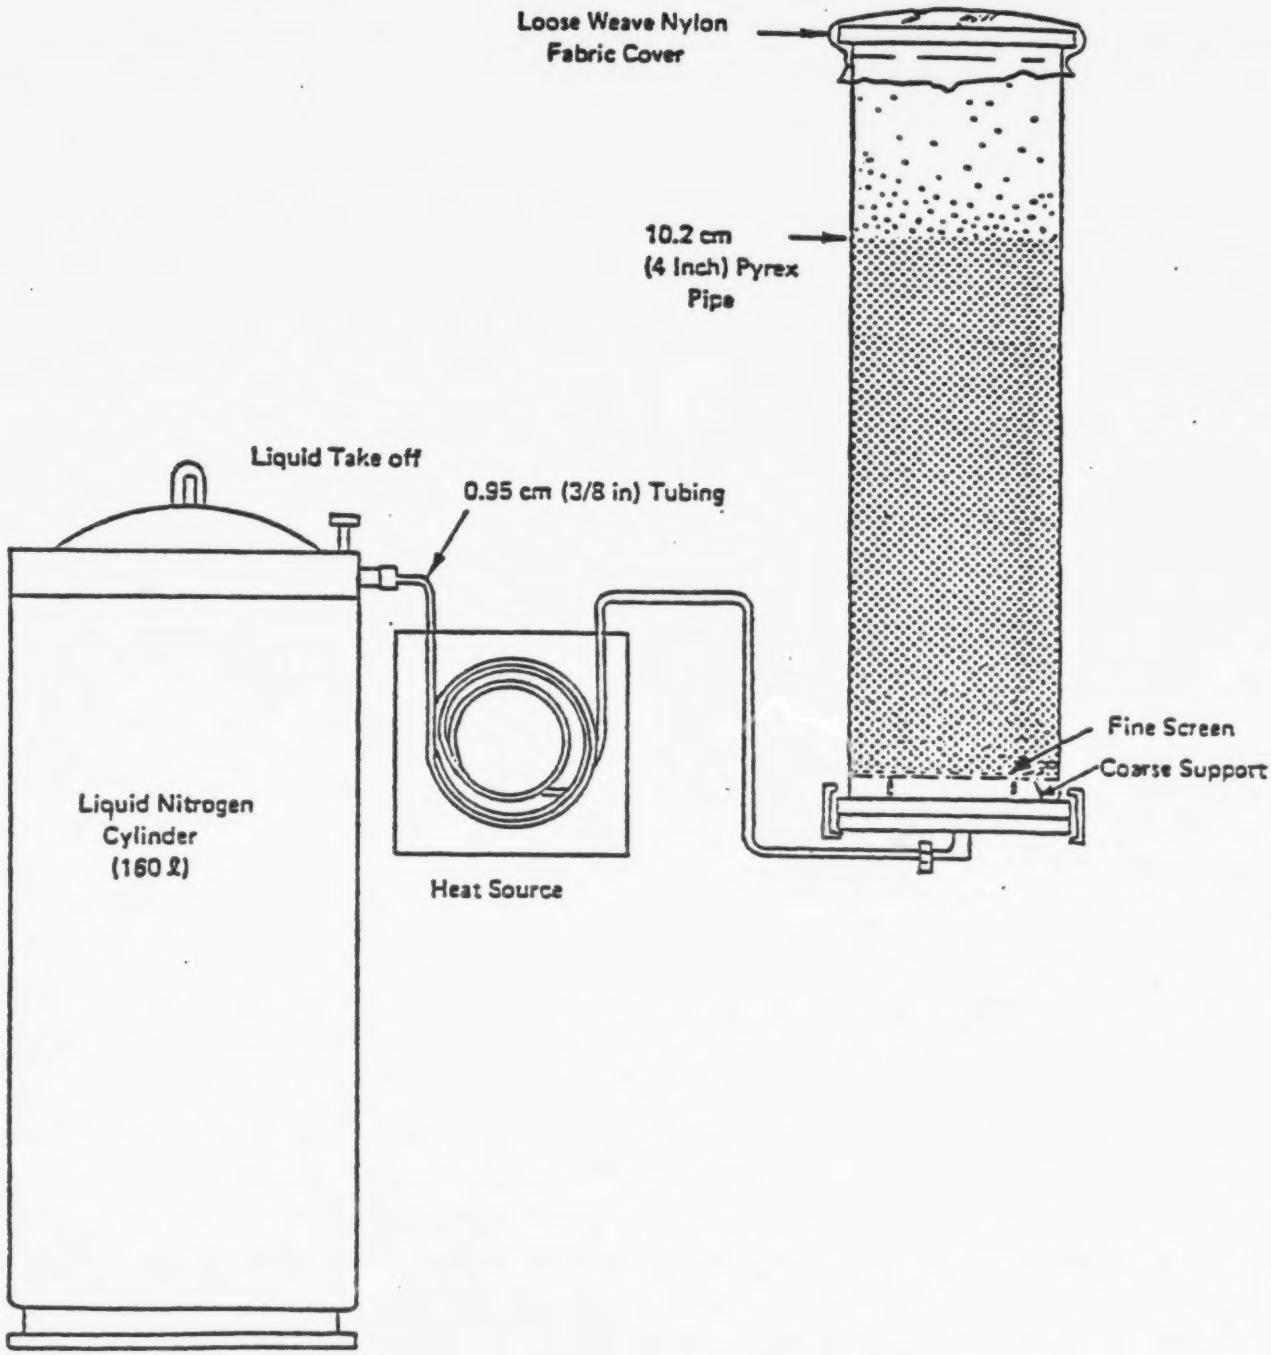

Figure A-2-2. XAD-2® fluidized-bed drying apparatus.

4.1 Procedure for Residual Methylene Chloride

4.1.1 Description. A 1 ±0.1 g sample of dried resin is weighed into a small vial, 3 mL of toluene are added, and the vial is capped and well shaken. Five microliters of toluene (now containing extracted methylene chloride) are injected into a gas chromatograph, and the resulting integrated area is compared to a reference standard.

The reference solution consists of 2.5 µL of methylene chloride in 100 mL of toluene, simulating 100 µg residual methylene chloride on the resin. The acceptable maximum content is 1,000 µg/g resin.

4.1.2 Experimental.

- 6 ft x 1/8 in SS column containing 10 percent OV-101 on 100/120 Supelcoport.
- Helium carrier at 30 mL/minute.
- FID operated on 4 x 10^{-11} A/mV.
- Injection port temperature: 250°C.
- Detector temperature: 305°C.
- Programmed: 30°C(4 min) 40°/min 250°C (hold).
- Program terminated at 1,000 seconds.

4.2 Procedure for Residual Extractable Organics

4.2.1 Description. A 20 ±0.1 g sample of cleaned, dried resin is weighed into a precleaned alundum or cellulose thimble which is plugged with cleaned, glass wool. (Note that 20 g of resin will fill a thimble, and the resin will float out unless well plugged.) The thimble containing the resin is extracted for 24 hours with 200 mL of pesticide-grade methylene chloride.*

The 200-mL extract is reduced in volume to 10 mL using a Kuderna-Danish concentrator and/or a nitrogen evaporation stream. Five microliters of that solution are analyzed by gas chromatography using the TCO analysis procedure. The concentrated solution should not

---

*Burdick and Jackson pesticide grade or equivalent purity.

contain more than 20 µg/mL of TCO extracted from the XAD-2®. This is equivalent to 10 µg/g of TCO in the XAD-2® and would correspond to 1.3 mg of TCO in the extract of the 130-g XAD-2® module. Care should be taken to correct the TCO data for a solvent blank prepared (200 → 10 mL concentration) in a similar manner.

4.2.2 Experimental. Use the TCO analysis conditions described in the revised Level 1 manual (EPA 600/7-78-201).

4.3 GC/MS Screen

The extract, as prepared in 4.2, is subjected to GC/MS analysis for each of the individual compounds of interest. The GC/MS procedure is described in Section 4.4 of Appendix A. The extract is screened at the MDL of each compound. The presence of any compound at a concentration greater than 25 µg/mL in the concentrated extract will require the XAD-2® to be re-cleaned by repeating the methlyene chloride step.

4.4 Methodology for Residual Gravimetric Determination

After the TCO value and GC/MS data are obtained for the resin batch by the above procedures, dry the remainder of the extract in a tared vessel. There must be less than 0.5 mg residue registered or the batch of resin will have to be extracted with fresh methylene chloride again until it meets this criterion. This level corresponds to 25 µg/g in the XAD-2® or about 3.25 mg in a resin charge of 130 g.

APPENDIX A-3

MS - ANALYTICAL IONS

This appendix lists the Appendix VIII Hazardous Constituents (according to the May 20, 1981 Federal Register) that are analyzed by GC/MS procedures with the appropriate MS analytical ions and their corresponding intensities.

MS - ANALYTICAL IONS

Compound	Ions (Intensities)
Acetonitrile	41(100), 40(50), 39(17), 38(5)
Acetophenone	105(100), 77(83), 51(31), 120(25)
2-Acetylaminofluorene	181(100),180(82), 223(62), 152 (37)
Acrolein	56(72), 27(100), 26(54), 55(51)
Acrylamide	27(100), 44(89), 71(72), 55(58)
Acrylonitrile	53(100), 26(93), 52(79), 51(30)
Aldrin	66(100), 263(73), 220(11)
Allyl alcohol	57(100), 29(39), 31(32), 58(26)
4-Aminobiphenyl	169(100), 170(14), 168(11), 84.5(9)
5-(Aminomethyl)-3-isoxazolol	98(100), 41(66), 39(49), 67(23)
Amitrole	28(100), 84(66), 57(28), 29(23)
Aniline	93(100), 66(33), 65(18), 39(18)
Aramite	
Auramine	
Benz(c)acridine	229(100), 228(19), 230(19), 201(10)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Benz(a)anthracene	228(100), 229(19), 226(19), 114(18)
Benzene	78(100), 77(19), 52(16), 51(15)
Benzene, dichloromethyl-	
Benzenethiol	110(100), 66(38), 39(28), 109(25)
Benzidine	184(100), 185(15), 183(11), 92(8)
Benzo(b)fluoranthene	252(100), 250(25), 253(25), 126(25)
Benzo(j)fluoranthene	252(100), 250(25), 253(25), 126(25)
Benzo(a)pyrene	252(100), 250(25), 253(23), 125(21)
p-Benzoquinone	108 (100), 54(99), 82(37), 53(32)
Benzotrichloride	159(100), 161(64), 89(14), 163(11)
Benzyl chloride	91(100), 126(28), 65(9), 92(8)
Bis(2-chloroethoxy)methane	93(100), 63(65), 95(32), 27(22)
Bis(2-chloroethyl) ether	93(100), 63(98), 27(75), 95(32)
N,N-Bis(2-chloroethyl)-2-naphthylamine	
Bis(2-chloroisopropyl) ether	45(100), 43(36), 41(34), 77(19),
Bis(chloromethyl)ether	79(100), 49(47), 81(33), 51(16)
Bis(2-ethylhexyl) phthalate	149(100), 57(54), 169(33), 71(27)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Bromoacetone	43(100), 15(84), 14(19), 79(13)
Bromomethane	94(100), 96(94), 15(47), 93(21)
4-Bromophenyl phenyl ether	248(100), 250(99), 141(45), 77(32)
Brucine	
2-Butanone peroxide	
Butyl benzyl phthalate	149(100), 91(50), 206(18), 104(12)
2-sec-Butyl-4,6-dinitrophenol (DNBP)	
Carbon disulfide	76(100), 32(22), 44(17), 78(9)
Carbon oxyfluoride	47(100), 66(55), 28(14), 31(4)
Chloral	*
Chlordane (alpha and gamma isomers)	373(19), 375(17), 377(10)
Chlorinated benzenes, N.O.S.	112(100), 77(45), 114(33), 51(12)
Chlorinated ethane, N.O.S.	64(100), 28(91), 29(84)
Chlorinated fluorocarbons, N.O.S.	**
Chlorinated naphthelene, N.O.S.	162(100), 164(33), 127(30)
Chlorinated phenol, N.O.S.	128(100), 130(33), 65(24)
Chloroacetaldehyde	*
Chloroalkyl ethers	**
p-Chloroaniline	127(100), 65(34), 129(31), 92(20)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensitites)
Chlorobenzene	112(100), 77(45), 114(33), 51(12)
Chlorobenzilate	
p-Chloro-m-cresol	142(100), 107(80), 144(32), 77(24)
1-Chloro-2,3-epoxypropane	
2-Chloroethyl vinyl ether	63(100), 27(62), 43(42), 44(38)
Chloroform	83(100), 85(64), 47(37), 35(20)
Chloromethane	50(100), 52(32), 15(21), 49(9)
Chloromethyl methyl ether	45(100), 29(25), 15(22), 49(17)
2-Chloronaphthalene	162(100), 164(33), 127(33), 128(17)
2-Chlorophenol	128(100), 130(33), 65(24), 64(12)
3-Chloropropionitrile	49(100), 54(77), 51(39). 53(26)
Chrysene	228(100), 226(26), 229(21), 114(13)
Coal Tars	**
Creosote	**
Cresols	**
Crotonaldehyde	*
2-Cyclohexyl-4,6-dinitrophenol	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
DDD	235(100), 237(66), 165(38), 75(21)
DDE	246(100), 318(83), 316(66), 248(58)
DDT	235(100), 237(72), 165(59), 75(22)
Diallate	
Dibenz(a,h)acridine	279(100), 280(25), 139.5(23), 278(14)
Dibenz(a,j)acridine	279(100), 280(25), 139.5(23), 278(14)
Dibenz(a,h)anthracene	278(100), 139(24), 279(16), 276(16)
7H-Dibenzo(c,g)carbazole	
Dibenzo(a,e)pyrene	302(100)
Dibenzo(a,h)pyrene	302(100)
Dibenzo(a,i)pyrene	302(100)
1,2-Dibromo-3-chloropropane	157(100), 155(78), 75(46), 159(25)
1,2-Dibromomethane	107(100), 109(95), 27(54), 28(11)
Dibromoethane	174(100), 93(72), 95(62), 172(52)
Di-n-butyl phthalate	149(100), 41(28), 29(25), 28(22),
Dichlorobenzene (meta, ortho and para isomers)	146(100) 148(62), 111(39), 75(23)
Dichlorobenzene, N.O.S.	146(100), 148(62), 111(39), 75(23)
3,3'-Dichlorobenzidine	252(100), 254(67), 256(10), 126(12)
1,4-Dichloro-2-butene	75(100), 89(48), 53(36), 77(33)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Dichlorodifluoromethane	
1,1-Dichloroethane	63(100), 27(72), 65(33), 83(12)
1,2-Dichloroethane	62(100), 64(33), 27(70)
trans-1,2-Dichloroethene	61(100), 96(80), 98(51), 63(29)
Dichloroethylene, N.O.S.	146(100), 148(62), 111(38), 113(13)
1,1-Dichloroethylene	61(100), 96(80), 98(52), 63(33)
Dichloromethane	49(100), 84(72), 86(44), 51(31)
2,4-Dichlorophenol	162(100), 164(65), 63(65), 98(40)
2,6-Dichlorophenol	162(100), 164(64), 63(29), 126(20),
2,4-Dichlorophenoxyacetic acid (2,4-D)	162(100), 220(78), 164(64), 222(49)
Dichloropropane, N.O.S.	63(100), 62(74), 27(41), 41(34)
1,2-Dichloropropane	79(100), 81(38), 43(27), 49(20)
Dichloropropanol, N.O.S.	
Dichloropropene, N.O.S.	75(100), 77(33), 110(25), 112(15)
1,3-Dichloropropene	75(100), 39(55), 77(32), 49(26)
Dieldrin	79(100), 108(19), 263(18), 277(18)
1,2:3,4-Diepoxybutane	55(100), 44(91), 43(73), 29(65)
N,N-Diethylhydrazine	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
O,O-Diethyl S-methyl ester of phosphordithioic acid	
O,O-Diethylphosphoric acid, O-p-nitrophenyl ester	
Diethyl phthalate	149(100), 177(28), 150(13), 176(9)
O,O-Diethyl O-2-pyrazinyl phosphorothioate	
Dihydrosafrole	163(100), 164(25), 77(19), 51(12)
Diisopropylfluorophosphate	
Dimethoate	
3,3'-Dimethoxybenzidine	244(100), 184(61), 201(38), 229(21)
p-Dimethylaminoazobenzene	120(100), 225(73), 77(58), 42(38)
7,12-Dimethylbenz(a)anthracene	256(100), 241(70), 257(48), 240(46)
3,3'-Dimethylbenzidine	
1,1-Dimethylhydrazine	60(100), 42(51), 59(45), 45(42)
1,2-Dimethylhydrazine	60(100), 42(98), 28(53), 45(52)
alpha,alpha-Dimethylphenethylamine	58(100), 91(7), 59(5), 134(3)
2,4-Dimethylphenol	122(100), 107(90), 121(55), 91(20)
Dimethyl phthalate	163(100), 77(19), 164(10), 194(6)
Dimethyl sulfate	15(100), 29(71), 95(66), 31(66)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Dinitrobenzene, N.O.S.	30(100), 75(75), 168(70), 76(52)
4,6-Dinitro-o-cresol and salts	
2,4-Dinitrophenol	
2,4-Dinitrotoluene	165(100), 89(65), 90(26), 63(35)
2,6-Dinitrotoluene	165(100), 89(52), 90(35), 148(22)
Di-n-octyl phthalate	149(100), 57(39), 167(32), 279(2)
1,4-Dioxane	28(100), 29(32), 59(24), 88(22)
Diphenylamine	
1,2-Diphenylhydrazine	77(100), 182(29), 105(23), 93(15)
Di-n-propylnitrosamine	70(100), 42(99), 117(79), 43(65)
Disulfoton	
2,4-Dithiobiuret	
Endosulfan	201(100), 283(48), 278(30)
Endrin and metabolites	81(100), 263(70), 82(61)
Ethyl carbamate	
Ethyleneimine	42(100), 43(62), 28(59), 15(22)
Ethyl methacrylate	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Ethyl methansulfonate	79(100), 109(78), 97(26), 80(19)
Fluoroanthene	202(100), 200(20), 203(18), 101(13)
Fluoroacetic acid, sodium and salt	
Formaldehyde	*
Formic acid	
Glycidylaldehyde	*
Halomethane, N.O.S.	**
Heptachlor	100(100), 272(60), 274(46)
Heptachlor epoxide (alpha, beta and gamma isomers)	355(100), 353(79), 351(60)
Hexachlorobenzene	284(100), 286(80), 282(53), 142(29)
Hexachlorobutadiene	225(100), 227(65), 223(63), 260(38)
Hexachlorocyclohexane (all isomers)	181(100), 183(99), 109(80), 217(78)
Hexachlorocyclopentadiene	
Hexachloroethane	117(100), 119(95), 199(50), 201(85)
1,2,3,4,10,10-Hexachloro-1,4,4a,5,8,8a-hexahydro-1,4:5,8-endo, endo-dimethanonaphthalene	
Hexachlorophene	
Hexachloropropene	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Hexaethyl tetraphosphate	
Hydrazine	32(100), 31(47), 29(40), 30(31)
Indeno(1,2,3-c,d)pyrene	276(100), 138(38), 277(26), 274(21)
Iodomethane	142(100), 127(38), 141(14), 15(13)
Isocyanic acid, methyl ester	
Isobutyl alcohol	
Isosafrole	162(100), 104(42), 131(30), 103(28)
Kepone	
Maleic anhydride	26(100), 54(62), 25(61), 28(36)
Maleic hydrazide	
Malononitrile	66(100), 38(34), 39(34), 28(31)
Methyacrylonitrile	
Methanethiol	
Methapyrilene	58(100), 97(71), 72(22), 71(19)
Methoxychlor	
2-Methylaziridine	28(100), 56(80), 57(54), 30(37)
3-Methylcholanthrene	256(100)
4,4'-Methylenebis-(2-chloroaniline)	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Methyl ethyl ketone (MEK)	43(100), 29(24), 72(17), 27(16)
Methyl hydrazine	46(100), 45(61), 28(58), 31(41)
2-Methyllactonitrile	
Methyl methacrylate	41(100), 69(83), 100(51), 39(36)
Methyl methanesulfate	
N-Methyl-N'-nitro-N-nitrosoguanidine	
Methyl parathion	
Methylthiouracil	
Naphthalene	128(100), 127(20), 129(18), 64(7)
1,4-Naphthoquinone	158(100), 104(39), 76(34), 102(31)
1-Naphthylamine	143(100), 115(45), 116(25), 144(14)
2-Naphthylamine	143(100), 115(38), 144(14), 116(13)
Nicotine and salts	84(100), 133(27), 42(20), 162(19)
p-Nitroaniline	138(100), 92(50), 108(33), 65(30)
Nitrobenzene	77(100), 128(55), 51(55), 65(25)
Nitroglycerine	46(100), 30(24) 29(15), 76(9)
4-Nitrophenol	65(100), 139(90), 109(72), 81(33)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Nitrosamine, N.O.S.	**
N-Nitrosodi-n-butylamine	84(100), 57(79), 29(53), 41(52)
N-Nitrosodiethanolamine	
N-Nitrosodiethylamine	43(100), 42(68), 44(60), 56(56)
N-Nitrosodimethylamine	74(100), 42(75), 43(40), 44(10)
N-Nitroso-N-ethylurea	
N-Nitrosomethylethylamine	88(100), 42(93), 43(46), 56(24)
N-Nitroso-N-methylurea	
N-Nitroso-N-methylurethane	43(100), 96(76), 66(28), 79(20)
N-Nitrosomethylvinylamine	
N-Nitrosomorpholine	56(100), 116(55), 86(37), 28(13)
N-Nitrosonornicotine	
N-Nitrosopiperidine	42(100), 114(91), 55(56), 56(24)
N-Nitrosopyrrolidine	100(100), 41(61), 42(58), 68(16)
N-Nitrososarcosine	
5-Nitro-o-toluidine	
Octamethylpyrophosphormide	

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
7-Oxabicyclo[2.2.1]heptane-2,3-dicarboxylic acid	
Paraldehyde	*
Parathion	
Pentachlorobenzene	250(100), 252(62), 248(62), 108(41)
Pentachloroethane	117(100), 119(96), 167(95), 95(93)
Pentachloronitrobenzene (PCNB)	
Pentachlorophenol	266(100), 264(62), 268(63), 165(54)
Phenol	94(100), 66(19), 65(17)
Phenylenediamine	
Phosphorodithioic acid, O,O-diethyl S-((ethylthio) methyl)ester [Phorate]	
Phosphorothioic acid, O,O-dimethyl O-(p-((dimethyl-amino)sulfonyl)phenyl)ester [Famphur]	
Phthalic acid esters, N.O.S.	**
Phthalic anhydride	104(100), 76(84), 50(40), 148(39)
2-Picoline	
Polychlorinated biphenyl, N.O.S.	**
Pronamide	
1,3-Propane sultone	
n-Propylamine	
Propylthiouracil	

MS ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
2-Propyn-1-ol	55(100), 39(8), 28(6), 29(5)
Pyridine	79(100), 52(71), 51(36), 50(26)
Resorcinol	
Saccharin and salts	183(100), 76(99), 50(72), 120(40)
Safrole	162(100), 131(38), 104(31), 135(26)
1,2,4,5-Tetrachlorobenzene	216(100), 214(79), 218(49), 179(15)
2,3,7,8-Tetrachlorodibenzo-p-dioxin (TCDD)	322( ), 320( )
Tetrachloroethane, N.O.S.	
1,1,1,2-Tetrachloroethane	83(100), 85(66), 131(7), 133(7)
1,1,2,2-Tetrachloroethane	131( ), 133( ), 117( ), 119( )
Tetrachloroethene	166(100), 164(78), 129(64), 131(62)
Tetrachloromethane	
2,3,4,6-Tetrachlorophenol	
Tetraethyldithiopyrophosphate	
Tetraethylpyrophosphate	
Tetranitromethane	
Toluene	92(65), 91(100), 65(12), 51(6)

MS ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
Toluenediamine	121(100), 122(93), 94(17), 105(13)
Toluene diisocyanate	174(100), 145(40), 28(39), 27(38)
Toxaphene	231( ), 233( ), 235( )
Tribromomethane	173(100), 171(50), 175(49), 93(22)
1,2,4-Trichlorobenzene	180(100), 182(95), 184(30), 145(30)
1,1,1-Trichloroethane	97(100), 99(66), 117(17), 119(16)
1,1,2-Trichloroethane	97(100), 83(95), 99(66), 85(60)
Trichloroethene	95(100), 130(90), 132(85), 97(66)
Trichloromethanethiol	
Trichloromonofluoromethane	
2,4,5-Trichlorophenol	196(100), 198(97), 200(31), 97(20)
2,4,6-Trichlorophenol	196(100), 198(96), 200(31), 132(28)
2,4,5-Trichlorophenoxyacetic acid (2,4,5-T)	
2,4,5-Trichlorophenoxypropionic acid (2,4,5-TP or Silvex)	
Trichloropropane, N.O.S.	**
1,2,3,-Trichloropropane	75(100), 39(58), 49(42), 110(37)

MS-ANALYTICAL IONS (Continued)

Compound	Ions (Intensities)
0,0,0-Triethyl phosphorothioate	
sym-Trinitrobenzene	
Tris(2,3-dibromopropyl)phosphate	
Vinyl Chloride	62(100), 27(64), 64(33), 26(18)

N.O.S. = not otherwise specified

*Mass spectrum for aldehydes depends upon derivatization method

**Mass spectrum depends on specific compound